

AIRMAN

PG

PARTS CATALOG

部 件 样 本

SCREW COMPRESSOR

螺 杆 压 缩 机

PDS185S-6C2

FOR MODEL
适用机型

MODEL 机型	SER. NO. 适用机号
PDS185S-6C2	B4-6C20051~

NOTICE

1. This parts catalog contains all the parts and assemblies of "AIRMAN" brand products. The complete unit is divided into several parts groups, the details of which are clearly illustrated, and completely listed. So desired part number, name and quantity can be easily determined referring to Ref.No.

2. When you place order for service parts, please be sure to advise us of the following information.

- (1) Part number.
- (2) Quantity required.
- (3) Part name.
- (4) Model name and Serial number.

3. How to read parts catalog.

(1) Ref.No.

Reference number (Ref.No.) is to be used for locating the part number and name from the illustrations. (However some parts such as bolts and nuts etc., are not illustrated but their reference numbers only listed.)

Ref.No. 1, 1-1, 1-2, shows history of part modifications; namely ref.No. 1 changed to No. 1-1 and then 1-2.

Example: Ref.No.	Part No.
1.	21101 00101
1-1.	21101 00103

(2) Part No.

Every part has its own proper number. Even if a part has the same shape as an other part and if its number different, it is not interchangeable at all in many cases.

(3) Interchangeability

A. B. C. D. E. Q. X. Y. and Z. in column "Interchangeability" show the following.

A : A new part can replace an old part, but an old part cannot replace a new part.

B : Not interchangeable.

C : Disused.

D : Newly added.

E : Compatible with each other.

Q : Quantity per unit changed.

X : Included in this set of parts, this part is not used for this model.

Y : Part to be selected.

Z : This part can not be supplied as an individual part.

(4) Part name

Every part has its own proper name.

(5) Q'ty

The number shown in the column of Q'TY indicates the quantity of parts used per one unit machine.

(6) Applicable Ser. No. (Serial Number)

Ser.No. shows the machine number to which the part is applicable.

Month and year stated in column "Ser.No." show the month and year from which the part is applicable.

4. Abbreviations and marks used in this catalog.

ass'y	assembly	L	Length
C/H	Change column	o & p	overrun & parking brake
Comp.	Compressor	OPT.	Option
Const.	Consisting of	Press.	Pressure
Cont.	Control	SPC/S.	Special specifications
Cyl.	Cylinder	STD.	Standards
Eng.	Engine	T or t	Thickness
EXP.	Export	w.	with
Incl.	Including	w/o	without

5. HOW TO READ MODELS

Example: P D S □ 1 2 5 S □ - 5 B 1
 ① ② ③ ④ ⑤ ⑥ ⑦ ⑧ ⑨

- | | |
|--|--|
| ① P D : PORTABLE DIESEL ENGINE
S D : STATIONARY DIESEL ENGINE
S G : STATIONARY GAS ENGINE
S M : STATIONARY SNOW MACHINE | ⑤ S : SILENT TYPE and PROPANE
GAS ENGINE SILENT TYPE
T : CITY-GAS ENGINE SILENT TYPE
w/o : UNSILENCED TYPE |
| ② R : SLIDING VANE
S : SCREW (OIL-INJECTION)
D : SCREW (OIL-FREE) | ⑥ C : AFTER COOLER TYPE
D : DRY AIR TYPE
R : IN LINE PUMP TYPE
W : WATER-COOLED TYPE
w/o : STANDARD TYPE |
| ③ w/o : 0.69MPa or 0.70MPa
E : 0.86MPa
F : 1.03MPa
G : 1.18 to 1.37MPa
H : 1.72MPa
J : 2.07MPa
K : 2.41 to 2.45MPa | ⑦ 3 : SKID-MOUNTED TYPE
4 : TRAILER-MOUNTED TYPE
5 : BOX
6 : WIDE BODY
w/o : OTHERS |
| ④ 75 : ENGINE OUTPUT (kW) <SDD, SDSG ONLY>
125 : Free air delivery (cfm) | ⑧ MODEL CHANGE MARK
⑨ VARIATION MARK |

NOTE : We are always engaged in improving our products. So there may be some changes of the product which are not yet mentioned in this parts catalog. Therefore, in necessary case, we issue a revision in which such changes are added. When you have any question on the parts catalog, please ask your nearest dealer or directly us.

使用 说 明

1. 本部件样本记载了各部构造的部件分解示意图。根据各部件的指示编号，可以知道各部件的编号、名称以及一台机器所需的数量。
2. 订购部件时，请通知以下内容：
 - (1) 部件编号 (Part No.)
 - (2) 必要数量 (Q'ty)
 - (3) 部件名称 (Part Name)
 - (4) 机器型式 (Model)和机器编号 (Ser. No.)
3. 本部件样本的使用方法：
 - (1) 指 示 编 号 (Ref. No.)

起到从示意图中找出部件名称和部件编号的作用。
(请注意，部分示意图中未表示螺栓、螺母等小部件，只是标注了指示编号。)
指示编号一栏中的1, 1-1, 1-2, ……，表示部件的变更过程。
(变更过程：指示编号1的部件先变更为1-1，其次再变更为1-2)
 - (2) 部 件 编 号 (Part No.)

表示各部件的特定编号。
请注意，即使部件的形状相同，但是，如果部件的编号不相同，则不具备互换性。
 - (3) 互 换 性 (Interchangeability)

互换性一栏中记载的符号意义如下：
A：新部件可以代替旧部件使用，而旧部件不可以代替新部件使用。
B：新、旧部件之间没有互换性。
C：废止
D：新增加的部件
E：新旧部件均有互换性
Q：数量变更
X：此部件包括在成套部件内，但该机型未采用。
Y：可选部件
Z：不可以单件提供的部件
 - (4) 部 件 名 称 (Part Name)

表示各部件特定的名称。
 - (5) 数 量 (Q'ty)

表示该机器1台所需要的数量。
 - (6) 适用机号范围 (Applicable Ser. No.)

适用机号范围，表示同行记载部件所适用的机器编号 (SER. No.) 范围。
另外，代替机器编号所记载的年月，是表示从此年月开始变更。

4. 关于各省略符号的说明

ass'y (assembly)	组合部件	o & p (overrun & parking brake)	自动减速、 停车用刹车
C/H (Change column)	变更	OPT. (Option)	选择
Comp. (Compressor)	压缩机	Press. (Pressure)	压力
Const. (Consisting of)	由...构成	SPC/S. (Special specifications)	特殊规范
Cont. (Control)	控制	STD. (Standards)	标准
Cyl. (Cylinder)	气缸体	T or t (Thickness)	厚度
Eng. (Engine)	引擎	w. (with)	带有...
EXP. (Export)	出口	w/o (without)	不带有...
Incl. (Including)	含有...		
L (Length)	长度		

5. 关于型式名称的说明

例: P D S □ 1 2 5 S □ - 5 B 1
 ① ② ③ ④ ⑤ ⑥ ⑦ ⑧ ⑨


- | | |
|--|---|
| <p>① PD: 移动式, 柴油机引擎
 SD: 固定式, 柴油机引擎
 SG: 固定式, 液化石油气引擎
 SM: 造雪机规范</p> <p>② R: 滑片式
 S: 螺杆式
 空白: 造雪机</p> <p>③ 空白: 0.69MPa 或 0.70MPa
 E: 0.86MPa
 F: 1.03MPa
 G: 1.18~1.37MPa
 H: 1.72MPa
 J: 2.07MPa
 K: 2.41~2.45MPa</p> <p>④ 125: 排气量 (cfm)</p> | <p>⑤ S: 低噪音型 (含有液化石油气引擎低噪音型)
 T: 都市石油气低噪音型
 空白: 非低噪音型</p> <p>⑥ C: 带后冷却器型
 D: 干燥气体型
 R: 列式喷射泵型
 W: 水冷规范型
 空白: 标准规范型</p> <p>⑦ 3: 支脚型
 4: 拖车型
 5: 箱型
 6: 宽体型
 空白: 其它</p> <p>⑧ 改型记号
 ⑨ 变更记号</p> |
|--|---|

※ 敝公司始终致力于产品的不断改良更新, 部件样本有未能记载全部变更的可能。敝公司根据需要对部件样本进行更新改版。若有不明之处, 请向最近的分店、或销售店咨询。

CONTENTS

目 录

FIG. NO. 图 号	FIG. NAME 图 名 称	PAGE 页
—COMPRESSOR PARTS—		
21 - 00	AIR END	压缩机本体 21 - 1
31 - 00	MOUNTING, INTAKE, RECEIVER, SEPARATOR & SERVICE HEADER	底架、进气、储气、 分离与供气回路 31 - 1
36 - 00	AIR LINE	空气回路 36 - 1
37 - 00	OIL LINE & COOLING	油回路与冷却 37 - 1
39 - 00	NAME PLATE	标牌 39 - 1
41 - 00	ENGINE, EXHAUST & FUEL LINE	引擎、排气与燃料回路 41 - 1
44 - 00	ELECTRIC	电气 44 - 1
51 - 00	FRAME & BONNET	底盘与机壳 51 - 1
52 - 00	LINING	防音材料 52 - 1
54 - 00	RUNNING & STEERING	走行与转向 54 - 1
ORDER MADE PARTS		
SS1- 00	WITHOUT TIRE TYPE (HIGHWAY TYPE)	无车轮型 (公路型) SS1- 1
SS2- 00	WITHOUT TIRE TYPE	无车轮型 SS2- 1
—ENGINE PARTS—		
	[WITHOUT PRE-FILTER]	[WITH PRE-FILTER]
Fig. 1.	CYLINDER BLOCK	CYLINDER BLOCK
Fig. 2.	GEAR HOUSING	GEAR HOUSING
Fig. 3.	MOUNTING FLANGE & OIL SUMP	MOUNTING FLANGE & OIL SUMP
Fig. 4.	CYLINDER HEAD & BONNET	CYLINDER HEAD & BONNET
Fig. 5.	SUCTION MANIFOLD	SUCTION MANIFOLD
Fig. 6.	EXHAUST MANIFOLD	EXHAUST MANIFOLD
Fig. 7.	CAMSHAFT & DRIVING GEAR	CAMSHAFT & DRIVING GEAR
Fig. 8.	CRANKSHAFT & PISTON	CRANKSHAFT & PISTON
Fig. 9.	LUB. OIL SYSTEM	LUB. OIL SYSTEM
Fig. 10.	COOLING WATER SYSTEM	COOLING WATER SYSTEM
Fig. 11.	FUEL INJECTION PUMP	FUEL INJECTION PUMP
Fig. 12.	GOVERNOR	GOVERNOR
Fig. 13.	FUEL INJECTION VALVE	FUEL INJECTION VALVE
Fig. 14.	FUEL LINE	FUEL LINE
Fig. 15.	STARTING MOTOR	STARTING MOTOR
Fig. 16.	GENERATOR	GENERATOR
Fig. 17.	GASKET SET	GASKET SET
Fig. 18.	(15A) STARTING MOTOR	—

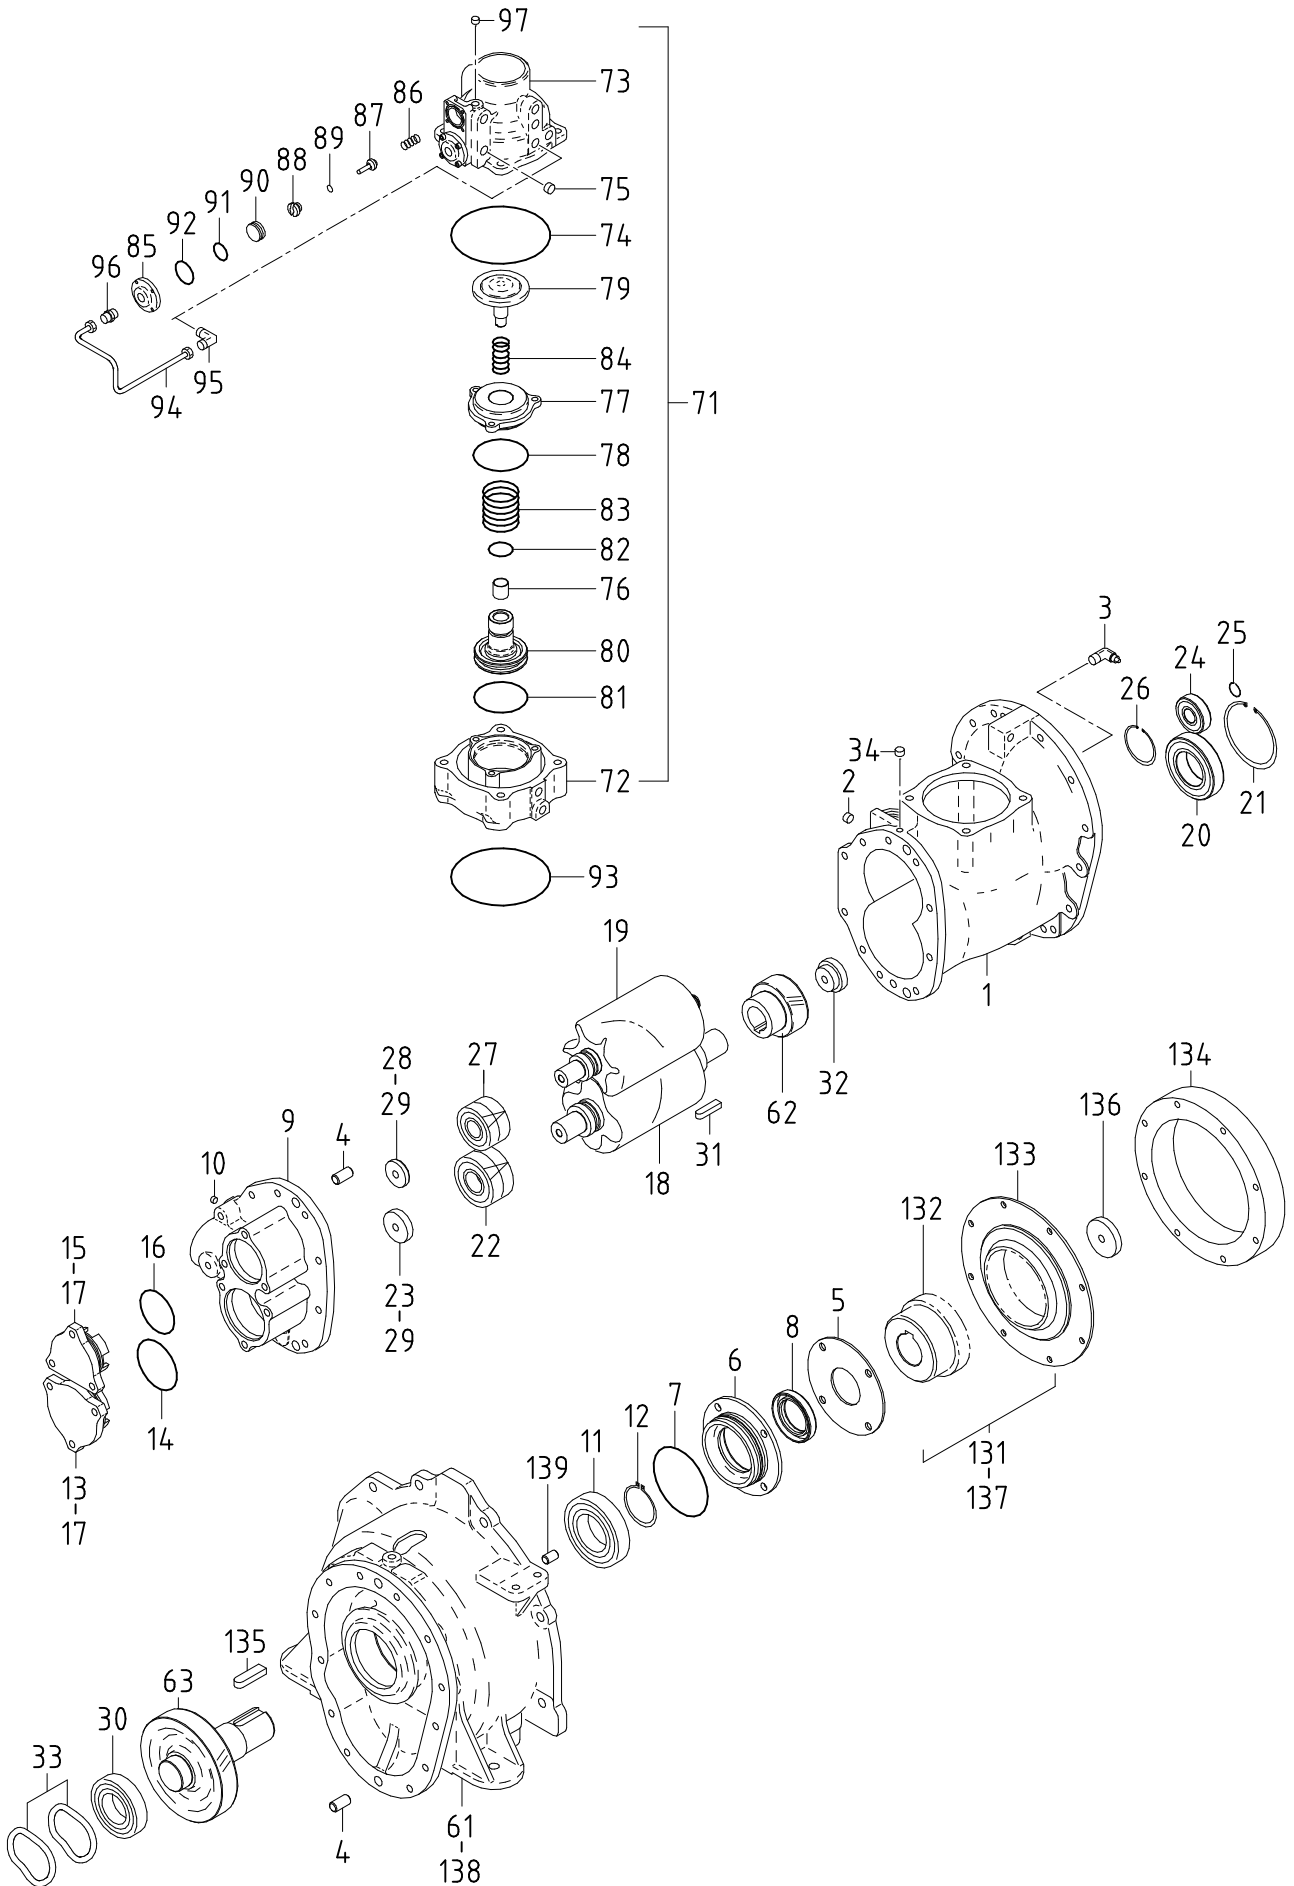 

21 - 00 AIR END

Ref. NO. 索引编号	Part NO. 部件编号	Inter- change ability 互换性	Part Name 部件名称	Q' ty 数量	Applicable Ser. No. 适用机号 范围	Remarks 备考
	21000 28510		COMPRESSION GROUP		~0051	
	21000 29910	B	COMPRESSION GROUP		—	
	21000 30211	A	COMPRESSION GROUP		0052~	
			(Const. No. 1~34)			
1	21201 41502		Cylinder, 1st	1	~0051	
1 -1	21201 43900	B	Cylinder, 1st	1	~3023	
1 -2	21201 45100	B	Cylinder, 1st	1	3024~	
	02280 10030		Socket bolt	10		
	02280 10075		Socket bolt	2		
2	03620 60002		Plug	2	~3023	
2 -1	03620 60001	B	Plug	2	3024~	
3	03734 21010		Nipple elbow	1		
4	03316 14028		Pin	4		
5	21212 18500		Cover, oil seal	1		
	22153 03400		Bolt	4		
6	21212 18300		Cover, oil seal	1		
7	03402 10095		O-ring	1	~7167	
7 -1	03402 15095	A	O-ring	1	7168~	
8	21211 10800		Oil seal	1		
9	21217 33300		Casing, discharge	1		
	02280 10030		Socket bolt	8		
	02280 10055		Socket bolt	2		
10	03620 60001		Plug	2		
11	03410 06211		Bearing	1		
12	03413 10055		Snap ring	1		
13	21218 33501		End cover	1		
14	22314 02500		O-ring	1	~7167	
14 -1	22314 02101	A	O-ring	1	7168~	
15	21218 33400		End cover	1		
16	22314 06200		O-ring	1	~7167	
16 -1	22314 02201	A	O-ring	1	7168~	
17	02280 08030		Socket bolt	6		
	03115 40008		Spring washer	6		
18	21461 31600		Rotor, male	1		
19	21462 22300		Rotor, female	1		
			A pair of rotor (male & female) should be ordered. / 螺杆请成对订购。			
20	21406 29900		Bearing, rotor	1		
21	03413 20090		Snap ring	1		
22	21470 14300		Bearing, complete	1		
23	21468 02700		Plate	1		
24	21406 28700		Bearing, rotor	1		
25	03413 40020		Snap ring	1		
26	03413 20052		Snap ring	1		
27	21470 14400		Bearing, complete	1		
28	21468 09200		Plate	1		
29	02280 10030		Socket bolt	2		
	03115 30010		Lock washer	2		
30	03410 06209		Bearing	1		
31	03307 10040		Key	1		

21 - 00 AIR END


Ref. NO. 索引编号	Part NO. 部件编号	Inter- change ability 互换性	Part Name 部件名称	Q'ty 数量	Applicable Ser. No. 适用机号 范围	Remarks 备考
32	21468 19800		Plate	1		
	02280 10045		Socket bolt	1		
	03115 30010		Lock washer	1		
33	21222 09600		Washer	2		
34	03620 60002	D	Plug	1	0052~	
	21000 28310		COMPRESSION GROUP (Const. No. 61~63)			压缩机构成
61	21214 18100		Casing, power side	1		引擎侧缸体
62	21467 40900		Gear, driven	1		从动齿轮
63	21469 31500		Gear, drive	1		主动齿轮
	22 - 00		VALVE GROUP			阀构成
71	22100 41201		Unloader ass'y (Const. No. 72~92, 94~97, See page 36-1 No. 35~37 & 46)	1	~3270	进气阀
71 -1	22100 42902	A	Unloader ass'y (Const. No. 72~92, 94~97, See page 36-1 No. 35~37, 46 & 47)	1	~C417	进气阀
71 -2	22100 42903	A	Unloader ass'y (Const. No. 72~92, 94~97, See page 36-1 No. 12, 35~37, 40, 41, 46, 47 & 49)	1	C418~	进气阀
	02280 10075		Socket bolt	4		内六角螺栓
	03115 30010		Lock washer	4		自锁垫圈
72	22111 28201		Body, unloader	1		机体, 进气阀
73	22115 12702		Cover, unloader	1		盖, 进气阀
74	03402 10125		O-ring	1		O型密封圈
75	03620 60002		Plug	1	~4515	堵头
75 -1	03620 60002	Q	Plug	2	4516~	堵头
76	23124 15600		Bushing	1		衬套
77	22115 11300		Cover, unloader	1		盖, 进气阀
	02282 08025		Socket bolt	3		内六角螺栓
78	03402 10070		O-ring	1		O型密封圈
79	22150 13801		Valve	1		阀
80	22130 09500		Piston, unloader	1		活塞, 进气阀
81	21441 04800		O-ring	1		O型密封圈
82	21441 04900		O-ring	1		O型密封圈
83	22144 16700		Spring	1		弹簧
84	22144 16600		Spring	1		弹簧
85	36621 01900		Cover, auto relief	2		盖
	02270 04012		Socket bolt, w/w	8		组合内六角螺栓
86	22144 10600		Spring	2		弹簧
87	36429 00801		Needle valve	2	~3270	针型阀
87 -1	36429 01300	A	Needle valve	2	~7167	针型阀
87 -2	36429 01600	A	Needle valve	2	7168~	针型阀
88	36428 00700		Valve seat	2	~7167	阀密封
88 -1	36428 01100	A	Valve seat	2	7168~	阀密封
89	03402 25008		O-ring	2		O型密封圈
90	36623 00800		Piston, auto relief	2	~7167	活塞
90 -1	36623 00900	A	Piston, auto relief	2	7168~	活塞
91	03402 25021		O-ring	2		O型密封圈
92	21221 02100		O-ring	2		O型密封圈
93	03402 10125		O-ring	1		O型密封圈

21 - 00 AIR END

Ref. NO. 索引编号	Part NO. 部件编号	Inter- change ability 互换性	Part Name 部件名称	Q' ty 数量	Applicable Ser. No. 适用机号 范围	Remarks 备考
94	36349 22400		Pipe	1	~0051	
94 -1	36349 22800	B	Pipe	1	0052~	
95	03734 53021		Nipple elbow	1		
96	03734 52021		Nipple	1	~0051	
96 -1	03734 53021	B	Nipple elbow	1	0052~	
97	03620 60002	C	Plug	1	4516~	

61 - 00			COUPLING GROUP	联轴器构成		
131	21425 03800		Coupling, complete	1		联轴器组成
132	21412 07600		Gear, driven	1		从动齿轮
133	61111 13300		Gear, drive	1		主动齿轮
134	61122 05400		Fly wheel	1		飞轮
135	03307 14050		Key	1		键
136	21468 04400		Plate	1		板件
	02282 10030		Socket bolt	1		内六角螺栓
	03115 30010		Lock washer	1		自锁垫圈
137	02135 08060		Bolt	8		螺栓
	03115 02008		Spring washer	8		弹簧垫圈
138	02138 12030		Bolt	3		螺栓
	02138 12040		Bolt	5		螺栓
	03115 02012		Spring washer	8		弹簧垫圈
139	03316 08020		Pin	2		销

 31 - 00 MOUNTING , INTAKE , RECEIVER , SEPARATOR & SERVICE HEADER

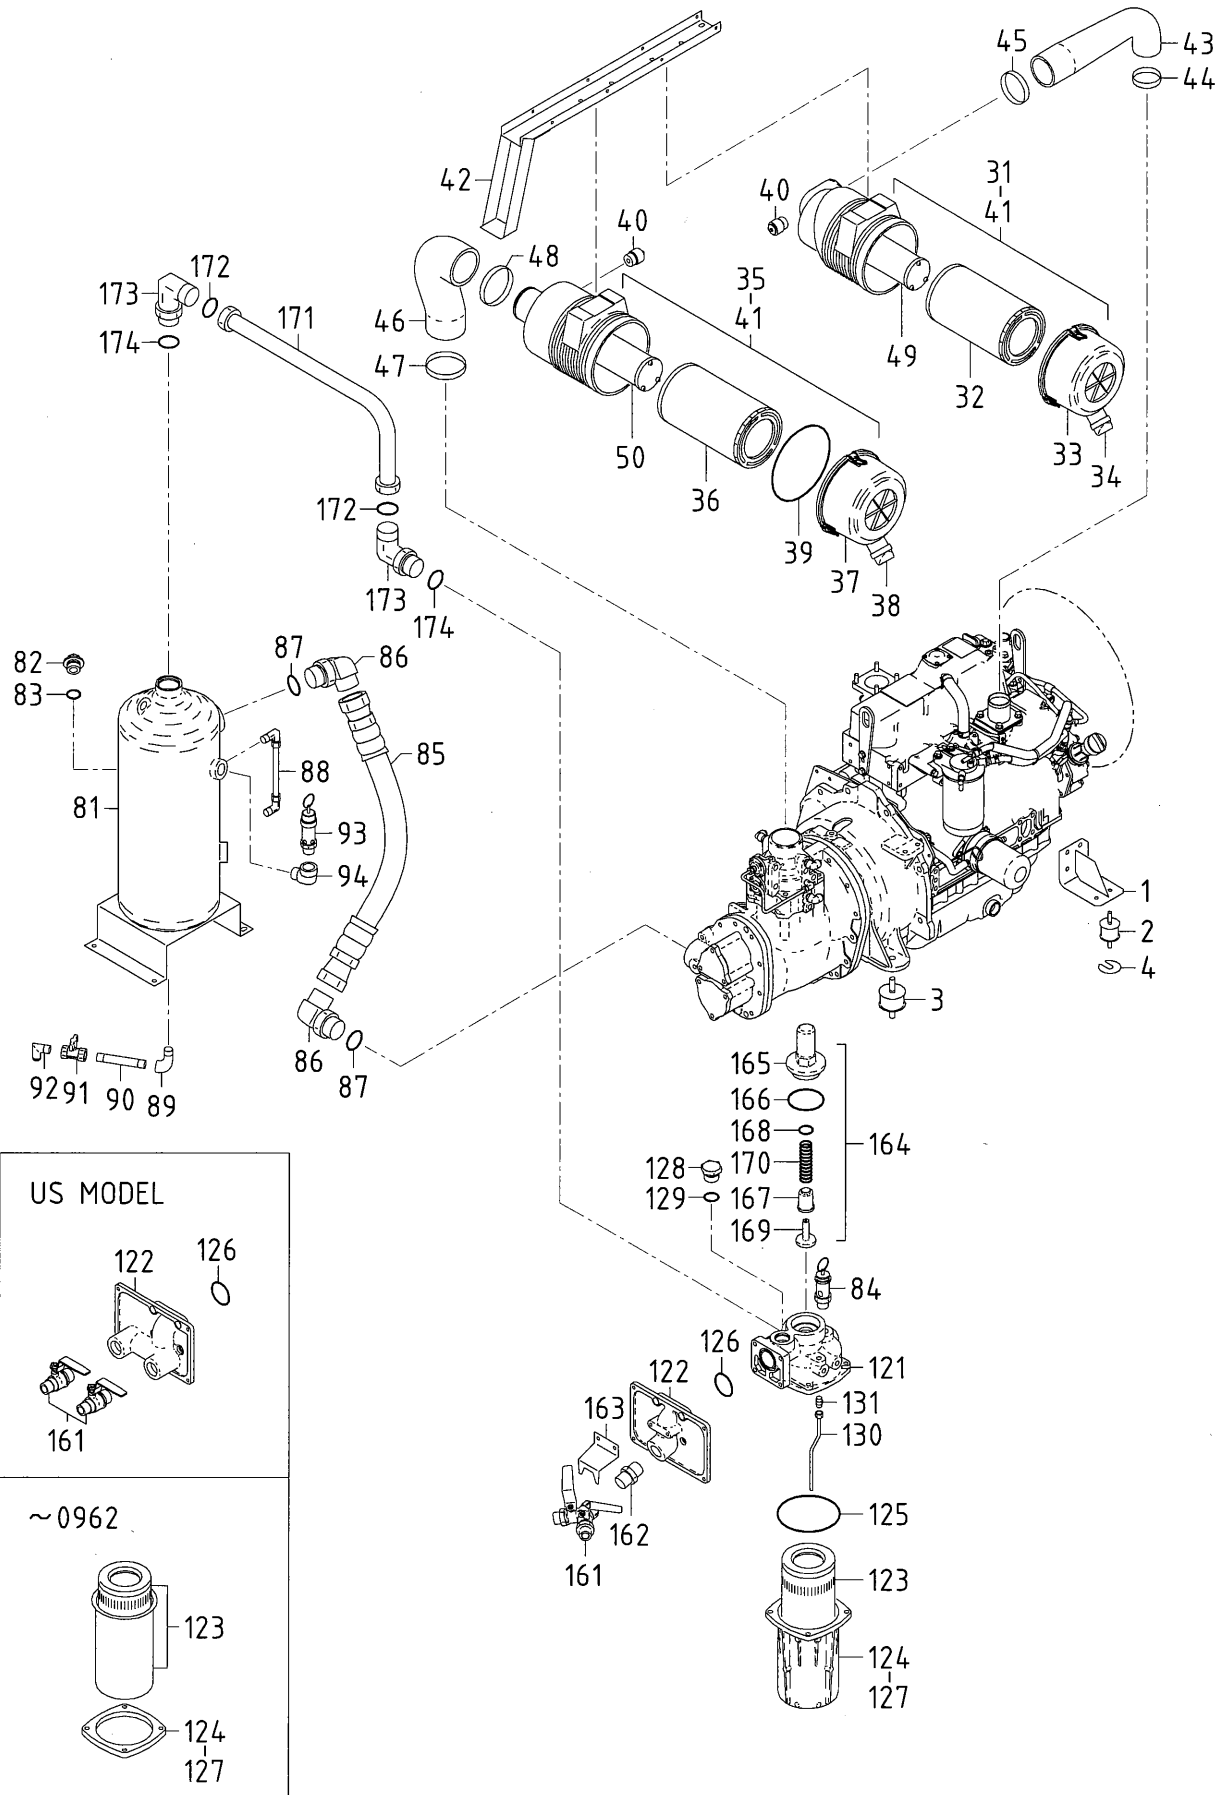

31 - 00 MOUNTING, INTAKE, RECEIVER, SEPARATOR & SERVICE HEADER

 Remarks
 A: EXP.
 B: US MODEL
 C: AUSTRALIA MODEL
 D: CHINA MODEL

Ref. NO. 索引编号	Part NO. 部件编号	Inter- change ability 互换性	Part Name 部件名称	Q' ty 数量	Applicable Ser. No. 适用机号 范围	Remarks 备考
	31 - 00		MOUNTING GROUP			底架构成
1	31110 06910		Bracket	2		
	02135 10020		Bolt	8		
	03115 02010		Spring washer	8		
2	31130 14200		Vibration isolator ass'y	2		
	02915 20008		Nut, w/w	4		
3	31130 20500		Vibration isolator ass'y	2		
	02915 20012		Nut, w/w	4		
4	31120 08900		Shim	2		
	32 - 00		INTAKE GROUP			进气构成
31	32100 40700		Air filter ass'y	1		Const. No. 32~34
32	32143 11700		Element	1		(outer)
33	32142 08600		Cup	1		
34	32151 01400		Vacuator valve	1		
35	32100 44900		Air filter ass'y	1		Const. No. 36~39
36	32143 11800		Element	1		(outer)
37	32142 11300		Cup	1		
38	32151 01600		Vacuator valve	1		
39	32147 03600		O-ring	1		
40	32148 00100		Filter service indicator	2		
41	02201 08012		Flange bolt	4		
42	32240 42501		Bracket	1		
	02201 08020		Flange bolt	4		
43	32331 78800		Hose	1		
44	03511 20070		Hose clip	1		
45	03511 20090		Hose clip	1		
46	32331 78701		Hose	1		
47	03511 20100		Hose clip	1		
48	03511 20110		Hose clip	1	~8324	
48 -1	03511 20100	A	Hose clip	1	8325~	
49	32143 12900		Element	1		(inner)
50	32143 13000		Element	1		(inner)

31 - 00 MOUNTING, INTAKE, RECEIVER, SEPARATOR & SERVICE HEADER





Remarks
 A: EXP.
 B: US MODEL
 C: AUSTRALIA MODEL
 D: CHINA MODEL

Ref. NO. 索引编号	Part NO. 部件编号	Inter- change ability 互换性	Part Name 部件名称	Q' ty 数量	Applicable Ser. No. 适用机号 范围	Remarks 备考
33 - 00 RECEIVER GROUP 储气构成						A B C D
81	33100 76110		Receiver tank	1		CLASS II JAP. REG.
81	33100 76110		Receiver tank	1	~4342	CLASS II JAP. REG. (AUS.)
81 -1	33100 84610	B	Receiver tank	1	4343~	CLASS II JAP. REG. (AUS.)
	02201 08020		Flange bolt	4		(AUS.)
81	33100 76610	C	Oil separator (Receiver tank)	1	5224~	SEMI ASME (KE) (SIN.)
81	33100 81710	C	Receiver tank	1	5355~	SEMI ASME (KE) (MAS.)
81	33100 78610		Receiver tank	1	~5223	ASME (EURE)
81 -1	33100 85810	A	Oil separator	1	~8831	ASME (EURE) (SIN.)
81 -2	33100 90810	A	Oil separator	1	~A680	ASME (EURE) (SIN.)
81 -3	33100 97810	B	Oil separator (Receiver tank) (Incl. No. 82)	1	A681~	ASME (EURE) (SIN.)
81	33100 78610		Receiver tank	1	~5354	ASME (EURE)
81 -1	33100 85810	A	Oil separator	1	~8831	ASME (EURE) (MAS.)
81 -2	33100 90810	A	Oil separator	1	~A680	ASME (EURE) (MAS.)
81 -3	33100 97810	B	Oil separator	1	~C020	ASME (EURE) (MAS.)
81 -4	33100 02320	B	Oil separator (Receiver tank) (Incl. No. 82)	1	C021~	ASME (EURE) (MAS.)
81	33100 76010		Receiver tank (Incl. No. 82, 83)	1		ASME
81	33100 76710		Receiver tank	1		GB
	02201 08020		Flange bolt	4		
82	33231 02500		Cap, oil filler	1		CLASS II JAP. REG. / SEMI ASME (KE) /GB
82	33231 04000		Cap, oil filler	1		ASME (EURE)
82	33231 03600		Cap, oil filler	1		ASME
83	03402 25030		O-ring	1		
84	35200 15200		Safety valve ass'y	1	~9696	◎ ◎
84 -1	35200 24600	B	Safety valve ass'y	1	~A410	◎ ◎
84 -2	35200 24700	B	Safety valve ass'y	1	~D461	◎ ◎
84 -3	35200 25500	B	Safety valve ass'y	1	D462~	◎ ◎
84	03620 41006		Plug	1		◎
84	35200 19500		Safety valve ass'y	1	~5634	◎
84 -1	35200 21400	A	Safety valve ass'y	1	5635~	◎
85	37160 47910		Pipe	1		(Hose)
86	03734 85140		Nipple elbow	2		Incl. No. 87
87	03402 25044		O-ring	2		
88	03841 30018		Nylon tube, w/n	1		
	03734 21030		Nipple elbow	2		
89	03731 21004		Elbow	1		
90	03730 04110		Gas pipe	1	~8807	
90 -1	03728 04110	A	Pipe	1	8808~	
91	03735 13004		Valve	1		
92	37730 02001		Nipple	1		
93	35200 14100		Safety valve ass'y	1		- ◎ - -
94	37740 01400		Elbow	1		- ◎ - -
94	03620 41006		Plug	1		◎ [ASME (EURE)]

31 - 00 MOUNTING, INTAKE, RECEIVER, SEPARATOR & SERVICE HEADER

 Remarks
 A: EXP.
 B: US MODEL
 C: AUSTRALIA MODEL
 D: CHINA MODEL

Ref. NO. 索引编号	Part NO. 部件编号	Inter- change ability 互换性	Part Name 部件名称	Q'ty 数量	Applicable Ser. No. 适用机号 范围	Remarks 备考
34 - 00 SEPARATOR GROUP 油分离构成						A B C D
121	34210 32600		Casing	缸体	1 ~0962	
121 -1	34210 32900	B	Casing	缸体	1 0963~	
122	35108 07300		Flange	法兰	1 ~0962	◎ ◎ ◎
122 -1	35108 07500	B	Flange	法兰	1 0963~	◎ ◎ ◎
	02201 10020		Flange bolt	法兰螺栓	4	◎ ◎ ◎
122	35100 53100		Air manifold	集气组成	1 ~0962	◎
122 -1	35100 53901	B	Air manifold	集气组成	1 0963~	◎
	02201 08020		Flange bolt	法兰螺栓	4	◎
	02283 10035	C	Socket bolt	内六角螺栓	4 0963~	
	02283 10045	D	Socket bolt	内六角螺栓	4 0963~	
	03115 31010		Lock washer	自锁垫圈	4	
123	34220 16101		Separator	油分离器	1 ~0962	
123 -1	34224 03000	B	Element	滤芯	1 0963~	
124	34250 18301		Cover, separator	盖, 油分离器	1 ~0962	
124 -1	34250 30503	B	Cover, separator	盖, 油分离器	1 0963~	
125	03402 15140		O-ring	O型密封圈	1 ~0962	
125 -1	03402 15145	B	O-ring	O型密封圈	1 0963~	
126	03402 15050		O-ring	O型密封圈	1	
127	02283 10035		Socket bolt	内六角螺栓	4 ~0962	
127 -1	02283 10030	B	Socket bolt	内六角螺栓	4 0963~	
	03115 30010		Lock washer	自锁垫圈	4	
128	33238 01600		Plug	堵头	1 ~0962	Incl. No. 129
128 -1	33238 01600	Q	Plug	堵头	2 0963~	Incl. No. 129
129	03402 25029		O-ring	O型密封圈	1 ~0962	
129 -1	03402 25029	Q	O-ring	O型密封圈	2 0963~	
130	34260 07000		Pipe	管	1	
131	03734 70021		Nipple	管接头	1	
35 - 00 SERVICE HEADER GROUP 供气回路构成						
161	35421 07700		Air valve	空气阀	1	◎ ◎ ◎
161	35421 00105		Air valve	空气阀	2	◎
162	03731 42008		Nipple	管接头	1	◎ - ◎ ◎
163	35470 41200		Bracket	支架(板)	1	◎ - ◎ ◎
	02201 08020		Flange bolt	法兰螺栓	2	◎ - ◎ ◎
164	35300 17000		Press. cont. vlv. ass'y	压力控制阀	1	Const. No. 165~170
165	35301 20200		Body	阀体	1	
166	03402 15075		O-ring	O型密封圈	1	
167	35303 08400		Piston	活塞	1	
168	03402 25032		O-ring	O型密封圈	1	
169	35303 03300		Piston	活塞	1	
170	22144 07700		Spring	弹簧	1	
171	33410 03600		Pipe	管	1 ~0962	
171 -1	33410 03800	B	Pipe	管	1 0963~	
172	37187 01200		O-ring	O型密封圈	2	
173	GD920 14300		Nipple	管接头	2	Incl. No. 174
174	03402 25038		O-ring	O型密封圈	2	

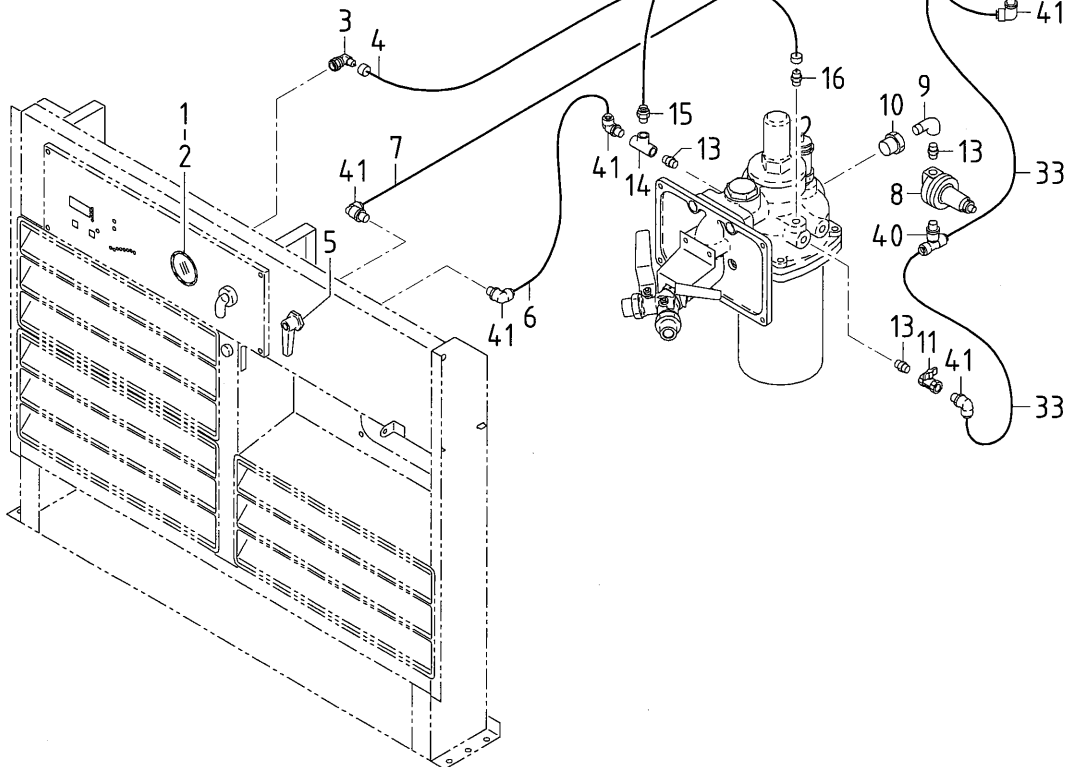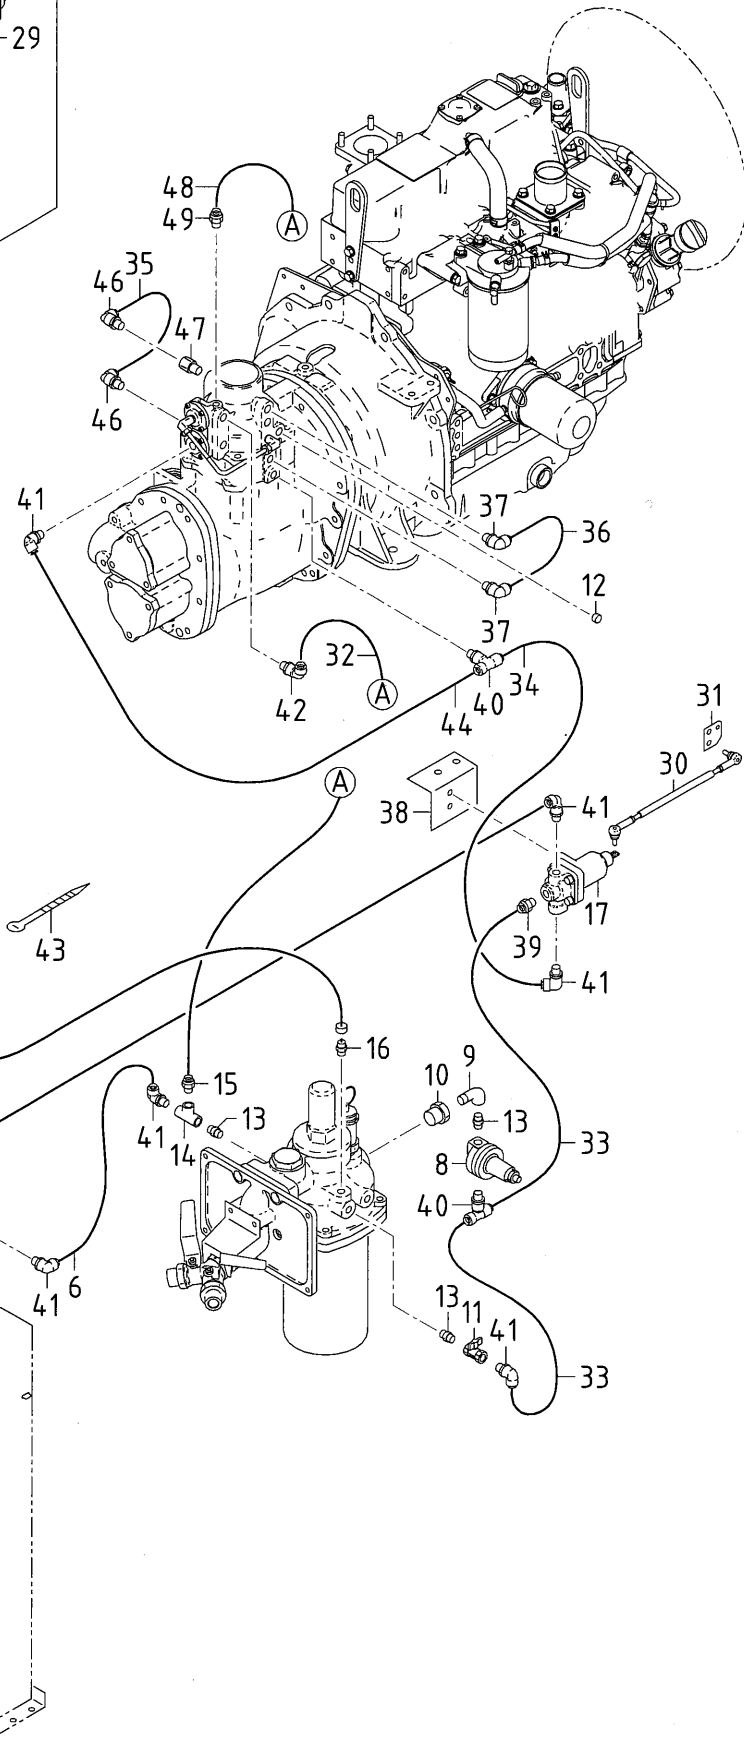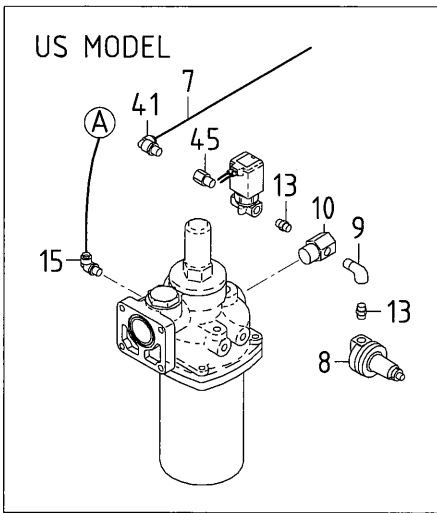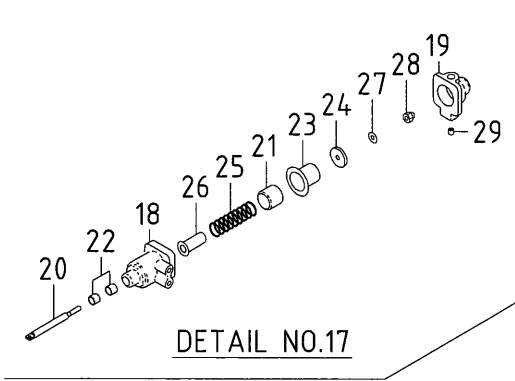    

36 - 00 AIR LINE

Remarks
 A: EXP.
 B: US MODEL
 C: AUSTRALIA MODEL
 D: CHINA MODEL



Ref. NO. 索引编号	Part NO. 部件编号	Inter- change ability 互换性	Part Name 部件名称	Q' ty 数量	Applicable Ser. No. 适用机号 范围	Remarks 备考
	36 - 00		CONTROL GROUP			A B C D
1	36141 15503		Gauge, air press.	1		◎ ◎ ◎
1	36141 18600		Gauge, air press.	1	~D148	◎ ◎
1 -1	36141 15503	B	Gauge, air press.	1	D149~	- ◎
2	36131 03100		Cushion rubber	1		
3	36152 02500		Bushing	1	~C955	◎ ◎
3 -1	36152 00600	B	Bushing	1	C956~	◎ ◎
3	03734 21151		Nipple elbow	1	~C955	◎ ◎
3 -1	03734 20151	B	Nipple	1	~D148	◎ ◎
3 -2	36152 00600	B	Bushing	1	D149~	- ◎
4	03840 15060		Nylon tube, w/n	1	~C955	
	06540 07060		Corrugated tube	1	~C955	
4 -1	03840 15053	B	Nylon tube, w/n	1	C956~	
	06540 07048	B	Corrugated tube	1	C956~	
5	35421 01600		Air valve	1		◎ - ◎ ◎
6	03890 20035		Nylon tube	1		◎ - ◎ ◎
7	03890 20077		Nylon tube	1		◎ ◎ ◎
7	03890 20024		Nylon tube	1		◎
8	36400 19000		Regulator ass'y	1		(PRESS. CONTROL)
9	03731 21002		Elbow	1		
10	03732 00602		Bush	1		◎ ◎ ◎
10	37189 37000		Bushing	1		◎
11	03735 13002		Valve	1		
12	03620 60002		Plug	4		◎ ◎ ◎
12	03620 60002		Plug	2		◎
13	03731 44002		Nipple	3		
14	03731 30002		Tee	1		◎ - ◎ ◎
15	03734 64028		Nipple	1		◎ ◎ ◎
15	03734 65028		Nipple elbow	1		◎
16	03734 20015		Nipple	1	~0962	
16 -1	03734 21015	A	Nipple elbow	1	0963~	
17	36400 21901		Regulator ass'y	1	~3270	Const. No. 18~29
17 -1	36400 23200	A	Regulator ass'y	1	~5845	Const. No. 18~29
17 -2	36400 23800	A	Regulator ass'y	1	5846~	Const. No. 18~29
	02238 08020		Bolt, w/w	2		
18	36421 03600		Body	1		
19	36422 01900		Cap	1		
	02283 06025		Socket bolt	4		
	03115 40006		Spring washer	4		
20	22152 04900		Shaft	1		
21	22130 05500		Piston	1		
22	23124 10300		Bushing	2		
23	36437 01500		Diaphragm	1		
24	36435 01400		Washer	1		
25	22144 12800		Spring	1		
26	31144 14400		Spacer	1	~3270	
26 -1	31144 14500	B	Spacer	1	~5845	
26 -2	31144 16000	B	Spacer	1	5846~	
27	34232 00300		Gasket	1		
28	02914 60008		Locking nut	1		
29	22123 04400		Orifice	1	~3270	
29 -1	22123 05100	B	Orifice	1	3271~	

36 - 00 AIR LINE

Remarks
 A: EXP.
 B: US MODEL
 C: AUSTRALIA MODEL
 D: CHINA MODEL

Ref. NO. 索引编号	Part NO. 部件编号	Inter- change ability 互换性	Part Name 部件名称	Q' ty 数量	Applicable Ser. No. 适用机号 范围	Remarks 备考
						A B C D
30	36280 33301		Rod	1		
	02915 20006		Nut, w/w	2		
	03116 12006	C	Plain washer	2	4961~	
	52744 03100	D	Washer	1	4961~	
31	36221 04500		Lever	1		
	02201 08020	C	Flange bolt	2	1474~	
	02238 08020	D	Bolt, w/w	2	1474~	
	02138 08016	B	Bolt	2	4961~	
	02915 20008		Hexagon flange nuts	2		
32	03890 30046	C	Nylon tube	1	4516~	
33	03890 20030		Nylon tube	2		
34	03890 20025		Nylon tube	1		
35	03890 20030		Nylon tube	1	~0051	
35 -1	03890 20020	B	Nylon tube	1	~3270	
35 -2	03890 25027	B	Nylon tube	1	3271~	
36	03890 20020		Nylon tube	1		
37	03734 65020		Nipple elbow	2		
38	36711 23500		Plate	1		
	02248 10020		Bolt, w/w	1		
39	03734 64020		Nipple	1		
40	03734 66020		Tee nipple	2		
41	03734 65020		Nipple elbow	7		◎ ◎ ◎
41	03734 65020		Nipple elbow	5		◎
42	03734 65028	C	Nipple elbow	1	4516~	
43	03425 00001		Vinyl clip	5		
44	03890 20020		Nylon tube	1		
45	37189 03300		Bushing	1		- ◎ - -
46	03734 65020		Nipple elbow	2	~3270	
46 -1	03734 65024	A	Nipple elbow	2	3271~	
47	37189 19700	D	Bushing	1	3271~	
48	03890 30046	D	Nylon tube	1	4516~	
49	03734 64028	D	Nipple	1	4516~	

  37 - 00 OIL LINE & COOLING










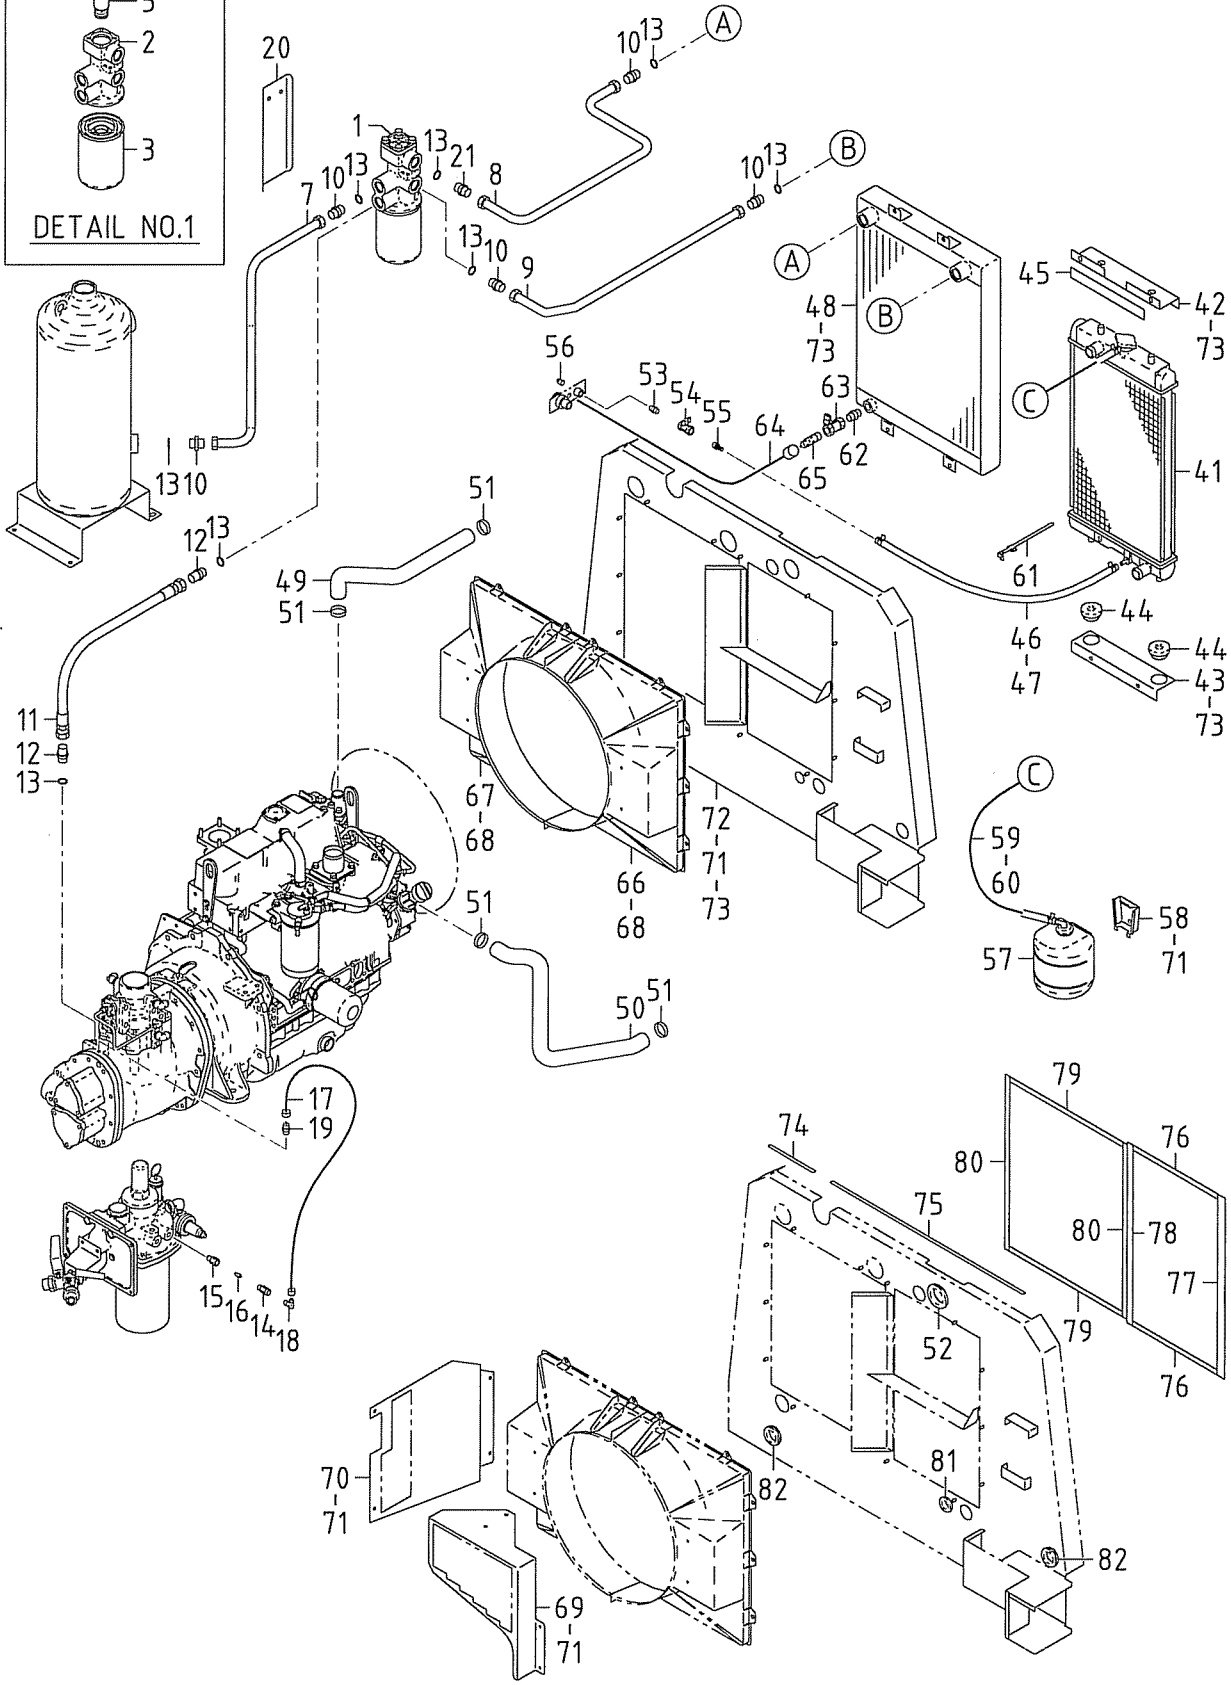
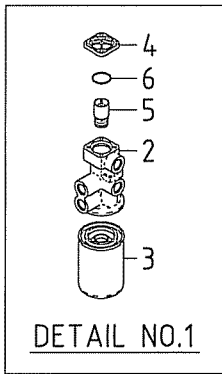


37 - 00 OIL LINE & COOLING

Ref. NO. 索引编号	Part NO. 部件编号	Inter- change ability 互换性	Part Name 部件名称	Q'ty 数量	Applicable Ser. No. 适用机号 范围	Remarks 备考
37 - 00			OIL LINE GROUP			油回路构成
1	37400 16100		Oil filter ass'y	1	~0892	Const. No. 2~6
1 -1	37400 16200	B	Oil filter ass'y	1	0893~	Const. No. 2~6
	02201 10020		Flange bolt	2		
2	37411 07600		Body	1	~0892	
2 -1	37411 07801	B	Body	1	0893~	
3	37438 08900		Filter cartridge	1		
4	37215 02800		Cover	1		
	02248 08030		Bolt, w/w	4		
5	37231 02100		Pellet ass'y	1		
6	03402 25045		O-ring	1		
7	37111 22302		Pipe	1	~0892	
7 -1	37111 23100	B	Pipe	1	0893~	
8	37112 49000		Pipe	1	~0892	
8 -1	37112 49700	B	Pipe	1	0893~	
9	37114 25000		Pipe	1	~0892	
9 -1	37114 26000	B	Pipe	1	0893~	
10	03734 75060		Nipple	5		Incl. No. 13
11	37110 04600		Hose	1	~4599	
11 -1	37110 08300	A	Hose	1	~B548	
11 -2	37110 12600	A	Hose	1	B549~	
12	GD920 14700		Nipple	2		Incl. No. 13
13	03402 25024		O-ring	8		
14	22200 16100		Check valve ass'y	1		
15	37189 34400		Bushing	1		
16	37580 01900		Strainer	1		
17	03841 20087		Nylon tube, w/n	1		
	06540 07085		Corrugated tube	1		
18	03734 21020		Nipple elbow	1		
19	03734 20201		Nipple	1		
20	37510 37400		Bracket	1	~0892	
	02201 08020		Flange bolt	2	~0892	
20 -1	37510 38100	B	Bracket	1	0893~	
	02201 06016	B	Flange bolt	2	0893~	
21	03734 75060		Nipple	1	~0892	Incl. No. 13
21 -1	03734 76060	B	Nipple	1	0893~	Incl. No. 13
38 - 00			COOLING GROUP			冷却构成
41	38100 43600		Radiator	1		
	38410 05700		Cap	1		
42	38420 95400		Bracket	1		
43	38420 96000		Bracket	1		
44	31131 04900		Rubber	2		
45	03407 64632		Seal rubber	1		
46	03611 08075		Hose	1		
47	03511 40018		Hose clip	2		
48	38200 32500		Oil cooler	1	~8059	
48 -1	38200 47000	A	Oil cooler	1	~B251	
48 -2	38200 50000	A	Oil cooler	1	B252~	

37 - 00 OIL LINE & COOLING

Ref. NO. 索引编号	Part NO. 部件编号	Inter- change ability 互换性	Part Name 部件名称	Q' ty 数量	Applicable Ser. No. 适用机号 范围	Remarks 备考
49	38524 70501		Hose (upper)	软管 (上)	1	
50	38524 70600		Hose (lower)	软管 (下)	1	
51	03511 20040		Hose clip	软管锁扣	4	
52	03403 00512		Grommet	环形圈	1	
53	03731 42002		Nipple	管接头	1	
54	03735 13002		Valve	阀	1	
55	37170 14000		Joint	接头	1	
56	03620 41002		Plug	堵头	1	
57	38590 01400		Reserve tank ass'y	辅助罐	1	
58	38591 00400		Bracket	支架(板)	1	
59	38594 04900		Hose	软管	1	
60	03511 40016		Hose clip	软管锁扣	2	
61	37181 03600		Clip	锁扣	4	
62	03731 42003		Nipple	管接头	1	
63	03735 13003		Valve	阀	1	
64	03851 30032		Nylon tube, w/n	带螺母尼龙软管	1	
65	03734 21030		Nipple elbow	螺纹弯接头	1	
66	38440 08410		Shroud, fan	风扇罩	1	
67	38440 08510		Shroud, fan	风扇罩	1	
68	02915 00006		Hexagon flange nuts	法兰螺母	14	
69	38450 86100		Guard, fan	风扇保护罩	1	
70	38450 86000		Guard, fan	风扇保护罩	1	~0892
70 -1	38450 87700	B	Guard, fan	风扇保护罩	1	0893~
71	02201 06016		Flange bolt	法兰螺栓	13	
72	52350 70022		Cover	盖	1	
73	02201 08020		Flange bolt	法兰螺栓	11	
74	03407 68012		Seal rubber	密封橡胶	1	
75	03407 68060		Seal rubber	密封橡胶	1	
76	03407 66923		Seal rubber	密封橡胶	2	
77	03407 44053		Seal rubber	密封橡胶	1	
78	03407 67304		Seal rubber	密封橡胶	1	
79	03407 66819		Seal rubber	密封橡胶	2	
80	03407 66842		Seal rubber	密封橡胶	2	
81	03403 00303		Grommet	环形圈	1	
82	03403 00392		Grommet	环形圈	1	~0752
82 -1	03403 00392	Q	Grommet	环形圈	2	0753~

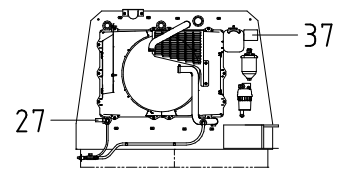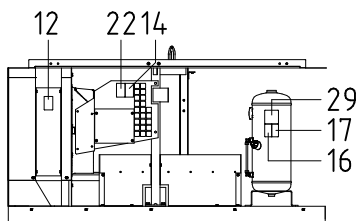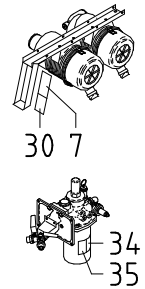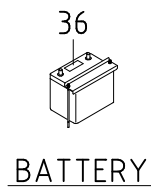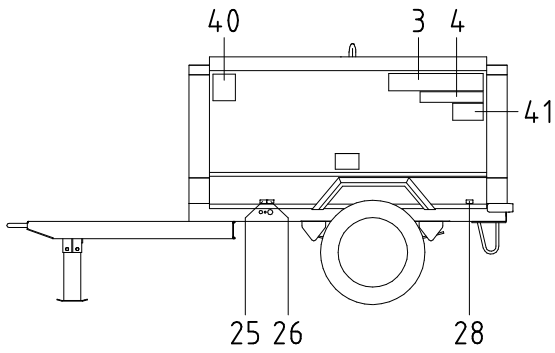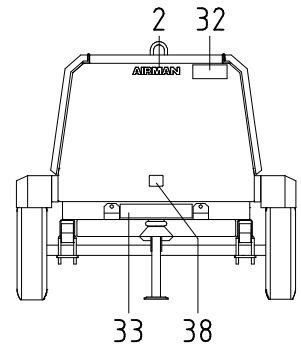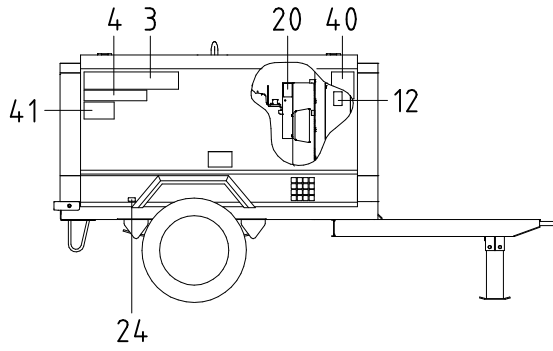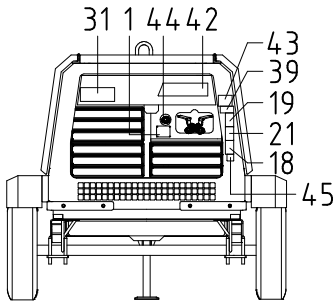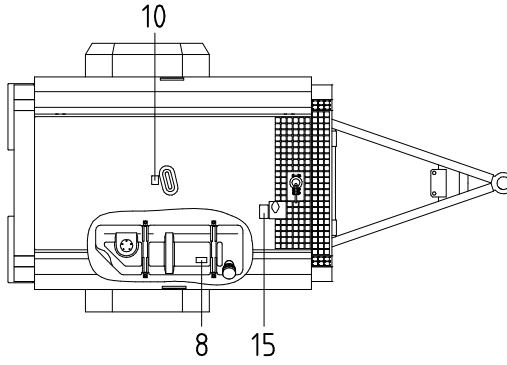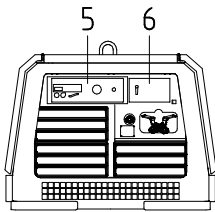           

FAN SHROUD

39 - 00 NAME PLATE

Remarks
 A: EXP.
 B: US MODEL
 C: AUSTRALIA MODEL
 D: CHINA MODEL

Ref. NO. 索引编号	Part NO. 部件编号	Inter- change ability 互换性	Part Name 部件名称	Q' ty 数量	Applicable Ser. No. 适用机号 范围	Remarks 备考
	39 - 00		ACCESSORY GROUP			A B C D
			附件构成			
	39600 14733		Instruction manual	使用说明书	~B437	◎
	39600 88240	B	Instruction manual	使用说明书	~C955	◎
	39600 49350	B	Instruction manual	使用说明书	C956~	◎
	39600 15131		Instruction manual	使用说明书		◎
	39600 15333		Instruction manual	使用说明书	~B437	◎
	39600 88440	B	Instruction manual	使用说明书	~C955	◎
	39600 49550	B	Instruction manual	使用说明书	~D148	◎
	39600 60450	B	Instruction manual	使用说明书	D149~	◎
	39600 15033		Instruction manual	使用说明书	~B437	◎
	39600 88340	B	Instruction manual	使用说明书	~C955	◎
	39600 49450	B	Instruction manual	使用说明书	C956~	◎
	39615 07700	C	Instruction manual (Eng.)	使用说明书 (引擎)	8808~	
1	39103 10811		Plate (SER. NO.)	标牌 (SER. NO.)	1	
	03260 03010		Blind rivet	铆钉	4	
2	39170 02000		Mark (AIRMAN)	铭牌 (AIRMAN)	1	
3	39178 23930		Plate (AIRMAN)	标牌 (AIRMAN)	2	
4	39178 24030		Plate (PDS185S)	标牌 (PDS185S)	2	
5	39178 64131		Plate (in-pane)	标牌 (仪表板)	1 ~C955	◎ ◎
5 -1	39178 65751	B	Plate (in-pane)	标牌 (仪表板)	1 C956~	◎ ◎
5	39178 64630		Plate (in-pane)	标牌 (仪表板)	1	◎
5	39178 64531		Plate (in-pane)	标牌 (仪表板)	1 ~C955	◎
5 -1	39178 65851	B	Plate (in-pane)	标牌 (仪表板)	1 C956~	◎
6	39153 67300		Plate (start-stop)	标牌 (启动-停机)	1 ~C955	◎ ◎
6 -1	39153 78800	B	Plate (start-stop)	标牌 (启动-停机)	1 C956~	◎ ◎
6	39153 67500		Plate (start-stop)	标牌 (启动-停机)	1	◎
6	39153 67400		Plate (start-stop)	标牌 (启动-停机)	1 ~C955	◎
6 -1	39153 79300	B	Plate (start-stop)	标牌 (启动-停机)	1 C956~	◎
7	39176 04810		Plate (notice)	标牌 (注意)	1	◎ ◎ ◎
7	39176 05210		Plate (notice)	标牌 (注意)	1	◎
8	39178 99730		Plate (diesel fuel)	标牌 (柴油)	1	◎ ◎
8	39178 22030		Plate (diesel fuel)	标牌 (柴油)	1	◎
8	39178 01340		Plate (diesel fuel)	标牌 (柴油)	1	◎
9	* * *					
10	39176 69300		Plate (lift position)	标牌 (起吊位置)	1	◎ ◎ ◎
10	39176 78500		Plate (lift position)	标牌 (起吊位置)	1	◎
11	* * *					
12	39176 69500		Plate (caution, high temp.)	标牌 (注意, 高温)	2	◎ ◎ ◎
12	39176 79200		Plate (caution, high temp.)	标牌 (注意, 高温)	2	◎
13	39173 04200		Plate, complete (Const. No. 14~22)	标牌 (1组) (含No. 14~22)	1	◎ ◎ ◎ -
14	* * *	Z	Plate (caution, high temp.)	标牌 (注意, 高温)	1 (39173 04200)	◎ ◎ ◎
14	39176 79200		Plate (caution, high temp.)	标牌 (注意, 高温)	1	◎
15	* * *	Z	Plate (caution, radiator cap)	标牌 (注意, 散热器盖)	1 (39173 04200)	◎ ◎ ◎
15	39176 79300		Plate (caution, radiator cap)	标牌 (注意, 散热器盖)	1	◎
16	* * *	Z	Plate (caution, fire)	标牌 (注意, 火灾)	1 (39173 04200)	◎ ◎ ◎
16	39176 79400		Plate (caution, fire)	标牌 (注意, 火灾)	1	◎

39 - 00 NAME PLATE


Remarks
 A: EXP.
 B: US MODEL
 C: AUSTRALIA MODEL
 D: CHINA MODEL

Ref. NO. 索引编号	Part NO. 部件编号	Inter- change ability 互换性	Part Name 部件名称	Q' ty 数量	Applicable Ser. No. 适用机号 范围	Remarks 备考
						A B C D
17	* * *	Z	Plate (warning, compressed air)	1	(39173 04200)	◎ ◎ ◎
17	39176 79500		Plate (caution, compressed air)	1		◎
18	* * *	Z	Plate (warning, exhaust gases)	1	(39173 04200)	◎ ◎ ◎
18	39176 78700		Plate (caution, exhaust gases)	1		◎
19	* * *	Z	Plate (warning, compressed air)	1	(39173 04200)	◎ ◎ ◎
19	39176 78800		Plate (caution, compressed air)	1		◎
20	* * *	Z	Plate (warning, cooling fan)	1	(39173 04200)	◎ ◎ ◎
20	39176 78900		Plate (caution, rotation)	1		◎
21	* * *	Z	Plate (danger, compressed air)	1	(39173 04200)	◎ ◎ ◎
21	39176 79000		Plate (warning, compressed air)	1		◎
22	* * *	Z	Plate (warning, V-belt)	1	(39173 04200)	◎ ◎ ◎
22	39176 78900		Plate (caution, rotation)	1		◎
23	39173 02100		Plate, complete (Const. No. 24~28)	1		◎ ◎ ◎ -
24	* * *	Z	Plate (fuel drain)	1	(39173 02100)	◎ ◎ ◎
24	39189 17600		Plate (fuel drain)	1		◎
25	* * *	Z	Plate (radiator drain)	1	(39173 02100)	◎ ◎ ◎
25	39189 17700		Plate (radiator drain)	1		◎
26	* * *	Z	Plate (eng. oil drain)	1	(39173 02100)	◎ ◎ ◎
26	39189 17800		Plate (eng. oil drain)	1		◎
27	* * *	Z	Plate (oil cooler drain)	1	(39173 02100)	◎ ◎ ◎
27	39189 17900		Plate (oil cooler drain)	1		◎
28	* * *	Z	Plate (receiver oil drain)	2	(39173 02100)	◎ ◎ ◎ (spare:1)
28	39189 18000		Plate (receiver tank drain)	1		◎
29	39147 00602		Plate (comp. oil)	1		◎ ◎
29	39147 02800		Plate (comp. oil)	1		◎
29	39179 02201		Plate (genuine oil)	1		◎
30	39176 05110		Plate (strainer)	1		◎ ◎ ◎
30	39176 05310		Plate (strainer)	1		◎
31	39178 63100		Plate (speed limit)	1		◎ - - ◎
32	39178 63200		Plate (never exceed)	1		◎ - - ◎

39 - 00 NAME PLATE

 Remarks
 A: EXP.
 B: US MODEL
 C: AUSTRALIA MODEL
 D: CHINA MODEL

Ref. NO. 索引编号	Part NO. 部件编号	Inter- change ability 互换性	Part Name 部件名称	Q' ty 数量	Applicable Ser. No. 适用机号 范围	Remarks 备考			
						A	B	C	D
33	39176 04910		Plate (caution, draw bar) 标牌 (注意, 牵引杆)	1		◎			
33	39176 05410		Plate (caution, draw bar) 标牌 (注意, 牵引杆)	1					◎
34	39176 59300	C	Plate (separator) 标牌 (油分离器)	1	0963~	-	-	-	◎
35	39176 79500	C	Plate (caution, compressed air) 标牌 (注意, 残压)	1	0963~	-	-	-	◎
36	39176 50000		Plate (danger, battery) 标牌 (危险, 电瓶)	1					
37	39178 25210		Plate (LLC) 标牌 (LLC)	1		◎		◎	
37	39178 00310		Plate (LLC) 标牌 (LLC)	1			◎		
37	39178 16320		Plate (LLC) 标牌 (LLC)	1					◎
38	39178 37310		Plate (caution, tow machine) 标牌 (注意, 牵引)	1		-	◎	◎	-
39	39178 43110		Plate (california) 标牌 (加利福尼亚)	1		-	◎	-	-
40	39178 13330		Plate (mark) 标牌 (标记)	2		-	◎	-	-
41	39178 12630		Plate (mark) 标牌 (标记)	2		-	◎	-	-
42	39178 72410		Plate (mark) 标牌 (标记)	1	~7518	-	◎	-	-
42 -1	39178 45140	B	Plate (Made in JAPAN) 标牌	1	~9410	◎	-	◎	-
42 -2	39178 84340	A	Plate (Made in JAPAN) (Made in JAPAN) 标牌	1	9411~	◎	-	◎	-
43	39176 09710	D	Plate 标牌	1	4367~	◎	-	◎	-
43 -1	39176 26411	B	Plate (caution, restart) 标牌 (注意, 重新启动)	1	C956~	◎	-	◎	-
44	39178 04250	D	Plate (EMERGENCY STOP) 标牌 (紧急停机)	1	B438~				
45	39178 38151	D	Plate (QR CODE) 标牌 (二维码)	1	B983~				

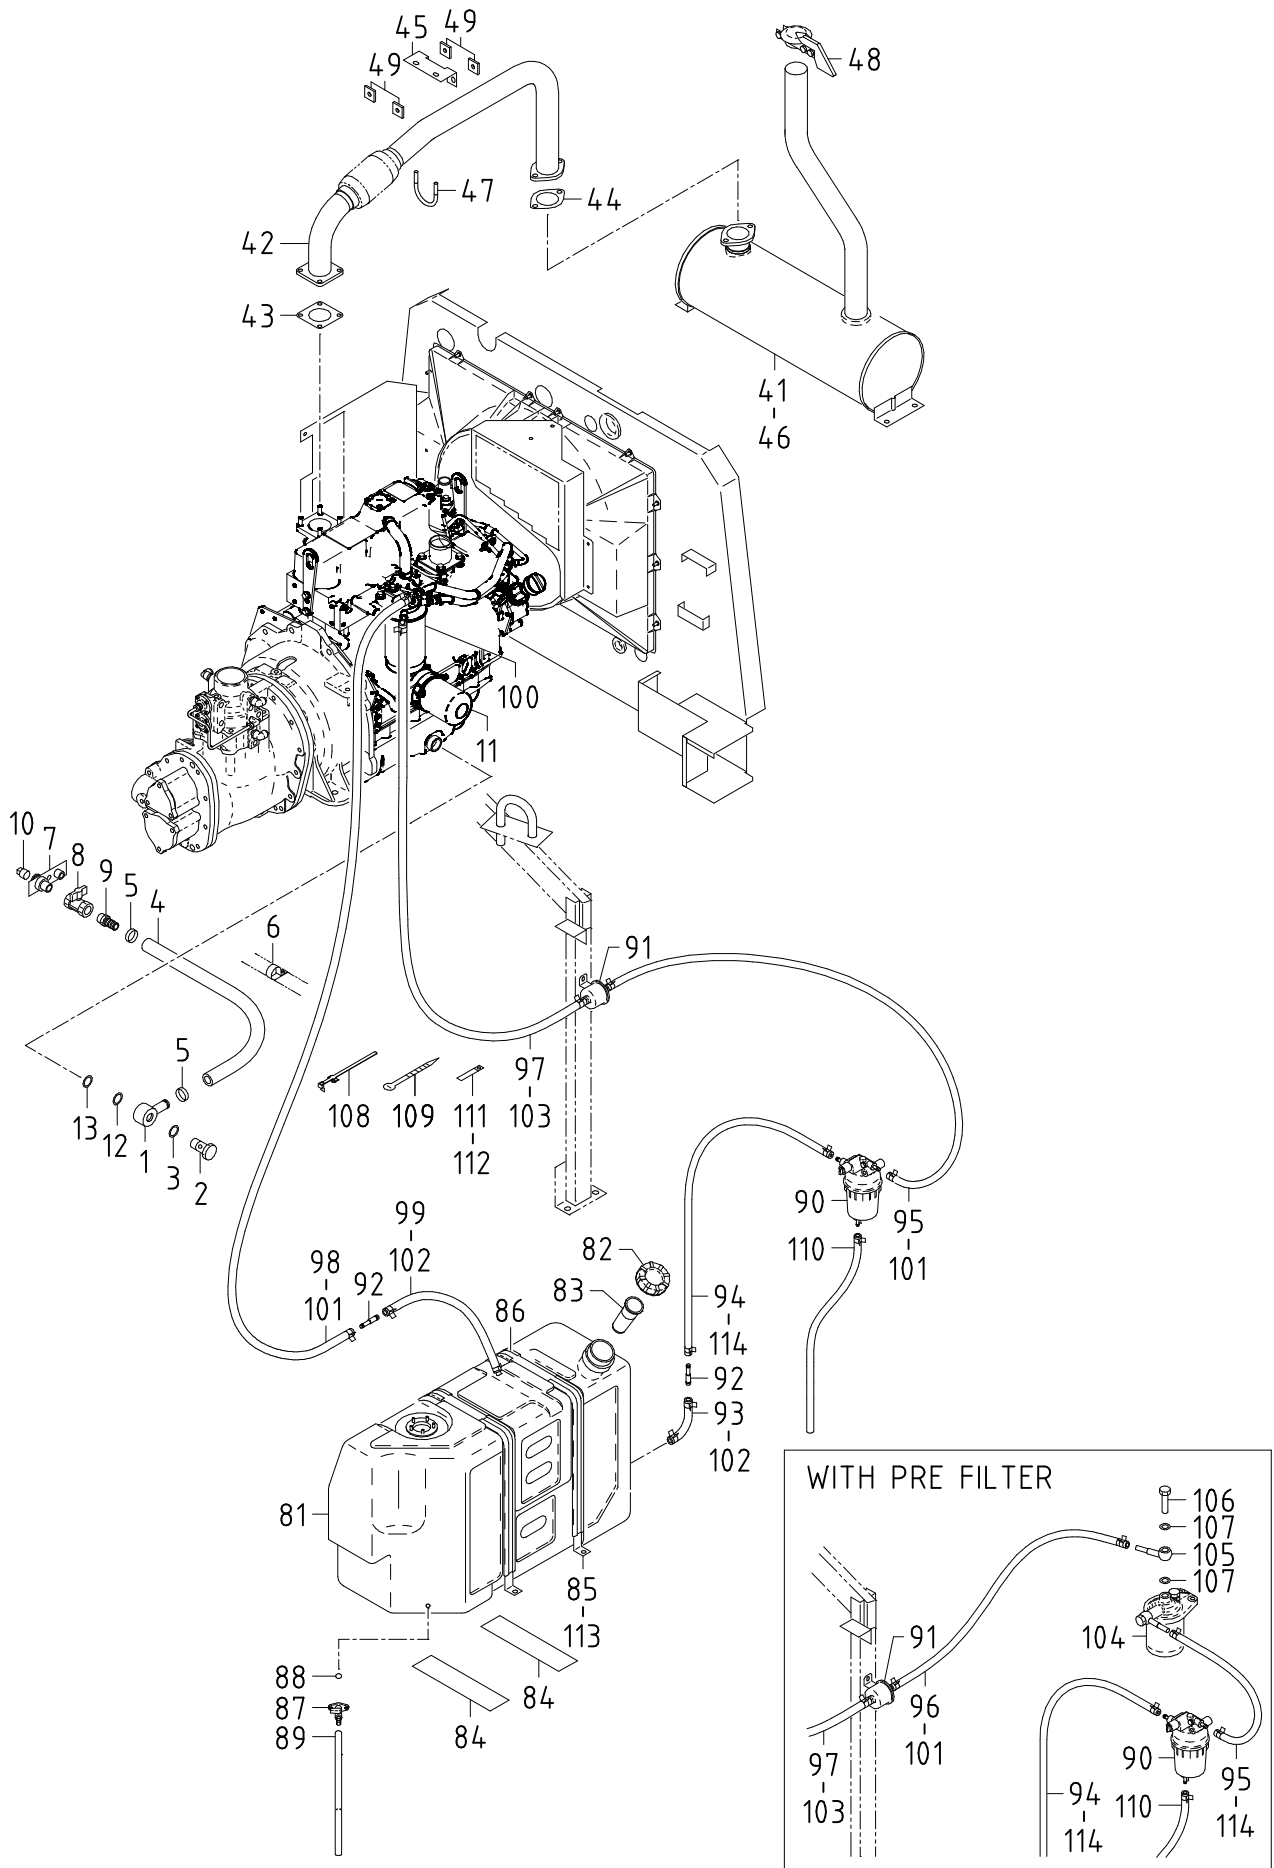 

41 - 00 ENGINE, EXHAUST & FUEL LINE

Remarks
A: EXP.
B: US MODEL
C: AUSTRALIA MODEL
D: CHINA MODEL

Ref. NO. 索引编号	Part NO. 部件编号	Inter- change ability 互换性	Part Name 部件名称	Q' ty 数量	Applicable Ser. No. 适用机号 范围	Remarks 备考
41 - 00			ENGINE GROUP	引擎构成		A B C D
1	43534 01702		Ring connector (Nipple)	1		
2	43532 05201		Nipple (Bolt)	1	~B982	
2 -1	43532 10200	A	Nipple (Bolt)	1	B983~	
3	03407 16022		Gasket	1		
4	03580 19070		Hose	1		
5	03511 20035		Hose clip	2		
6	03424 80039		Clip	1		
	02201 08020		Flange bolt	1		
7	41250 05600		Bracket	1		
	02201 06016		Flange bolt	2		
8	03735 13004		Valve	1		
9	37170 02900		Joint	1		
10	03620 41004		Plug	1		
11	41290 01100		Filter ass'y, Eng. oil	1	~4151	◎ ◎ ◎ ◎ See Engine parts Fig. 9.
11 -1	41290 01200	B	Filter ass'y, Eng. oil	1	~5935	- - ◎ -
11 -2	41290 01100	B	Filter ass'y, Eng. oil	1	5936~	- - ◎ - See Engine parts Fig. 9.
12	03407 16022		Gasket	1	~1179	
12 -1	41330 00700	B	Gasket	1	1180~	
13	41330 01000	D	Gasket	1	B885~	
42 - 00			EXHAUST GROUP	排气构成		
41	42100 81400		Exhaust muffler	1		
42	42310 96901		Pipe, exhaust	1		
	02136 10035		Bolt	2		(for muffler)
	02912 06010		Nut	2		(for muffler)
	03115 06010		Spring washer	2		(for muffler)
	03116 15010		Plain washer	2		(for muffler)
	02915 01008		Hexagon flange nuts	4		(for Eng.)
43	42324 14900		Gasket	1		
44	42324 13600		Gasket	1		
45	42240 30202		Bracket	1		
	02201 08020	C	Flange bolt	2	0103~	
	02201 08030	D	Flange bolt	2	0103~	
	02201 08030	C	Flange bolt	2	0753~	
	02201 08020	D	Flange bolt	2	0753~	
46	02246 08025		Bolt, w/w	4		
47	03830 08004		U-bolt	1		
	02915 00008		Hexagon flange nuts	2		
48	42210 02700		Cap, muffler	1		OPT.

41 - 00 ENGINE, EXHAUST & FUEL LINE


Remarks
A: EXP.
B: US MODEL
C: AUSTRALIA MODEL
D: CHINA MODEL

Ref. NO. 索引编号	Part NO. 部件编号	Inter- change ability 互换性	Part Name 部件名称	Q'ty 数量	Applicable Ser. No. 适用机号 范围	Remarks 备考
						A B C D
49	31130 27000	D	Vibration isolator ass'y	4	0103~	
	45214 02200	D	Washer	2	0103~	
	52162 00300	D	Collar	2	0103~	
49 -1	31130 27000	C	Vibration isolator ass'y	4	0753~	
	45214 02200	C	Washer	2	0753~	
	52162 00300	C	Collar	2	0753~	
	43 - 00		FUEL GROUP			燃料构成
81	43100 43802		Fuel tank	1	~0540	
81 -1	43100 75500	B	Fuel tank	1	0541~	
82	43220 02200		Cap	1	~0540	
82 -1	43220 03000	B	Cap	1	0541~	
83	43210 01700		Strainer	1		
84	38465 11901		Cushion rubber	2		
85	43310 31300		Belt	2	~0241	
85 -1	43310 31700	A	Belt	2	0242~	
86	43322 06200		Cushion	4	~0241	
86 -1	43322 06200	Q	Cushion	2	0242~	
87	35421 05500		Air valve	1		
	02248 06012		Bolt, w/w	2		
88	03402 25014		O-ring	1		
89	03600 08020		Hose	1		
90	43550 02900		Sedimenter	1	~5388	(YANMAR 129242-55701)
90 -1	43550 03200	B	Sedimenter	1	5389~	(YANMAR 129268-55701)
	02201 08070		Flange bolt	1		
91	43650 02700		Fuel pump	1		See Engine parts
	02201 06016		Flange bolt	2		Fig. 14.
92	43525 01800		Pipe, connection	2		
93	03600 09012		Hose	1		
94	03600 08031		Hose	1	~5388	
94 -1	03600 08021	B	Hose	1	~7403	
94 -2	43510 11400	A	Hose	1	7404~	
95	03600 08105		Hose	1		w/o PRE-FILTER
95	03600 08037		Hose	1	~7403	w. PRE-FILTER
95 -1	43510 11700	A	Hose	1	7404~	w. PRE-FILTER
96	03600 08076		Hose	1		w. PRE-FILTER
97	03600 08050		Hose	1		
98	03600 08080		Hose	1		
99	03600 09012		Hose	1		
100	43543 01400		Filter, cartridge	1	~4151	◎ ◎ ◎ ◎ See Engine parts Fig. 14.
100 -1	43543 01800	B	Filter, cartridge	1	~5935	- - ◎ -
100 -2	43543 01400	B	Filter, cartridge	1	5936~	- - ◎ - See Engine parts Fig. 14.






41 - 00 ENGINE, EXHAUST & FUEL LINE

Remarks
 A: EXP.
 B: US MODEL
 C: AUSTRALIA MODEL
 D: CHINA MODEL

Ref. NO. 索引编号	Part NO. 部件编号	Inter- change ability 互换性	Part Name 部件名称	Q' ty 数量	Applicable Ser. No. 适用机号 范围	Remarks 备考
101	03511 40016		Hose clip 软管锁扣	4		w/o PRE-FILTER
101	03511 40016		Hose clip 软管锁扣	4		w. PRE-FILTER
102	03511 40020		Hose clip 软管锁扣	4		
103	03511 10017		Hose clip 软管锁扣	2		
104	43540 08100		Filter ass'y 过滤器	1		w. PRE-FILTER
	43541 02400		Element 滤芯	1		See Engine parts Fig. 14.
	02201 08030		Flange bolt 法兰螺栓	2		w. PRE-FILTER
105	43534 05000		Ring connector 连接环件	2		w. PRE-FILTER
106	43532 09200		Nipple 管接头	2		w. PRE-FILTER
107	43531 02000		Gasket 垫片	4		w. PRE-FILTER
108	37181 03600		Clip 锁扣	1		
109	03425 00001		Vinyl clip 塑料卡扣	5		
110	03600 06050		Hose 软管	1		
	03511 40006		Hose clip 软管锁扣	1		
111	03424 80101		Clip 锁扣	1		w/o PRE-FILTER
112	02201 08020		Flange bolt 法兰螺栓	1		w/o PRE-FILTER
113	02201 08020		Flange bolt 法兰螺栓	4	~0241	
113 -1	02201 08030	A	Flange bolt 法兰螺栓	4	0242~	
114	03511 10013		Hose clip 软管锁扣	2	~7403	w/o PRE-FILTER
114 -1	03511 40020	A	Hose clip 软管锁扣	2	7404~	w/o PRE-FILTER
114	03511 10013		Hose clip 软管锁扣	4	~7403	w. PRE-FILTER
114 -1	03511 40020	A	Hose clip 软管锁扣	4	7404~	w. PRE-FILTER

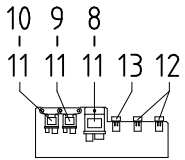 

VIEW-A

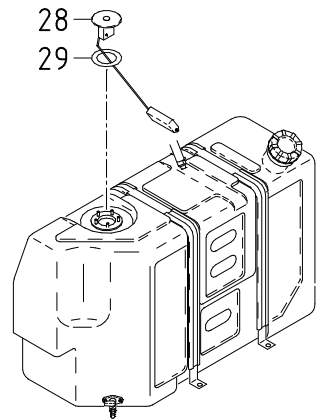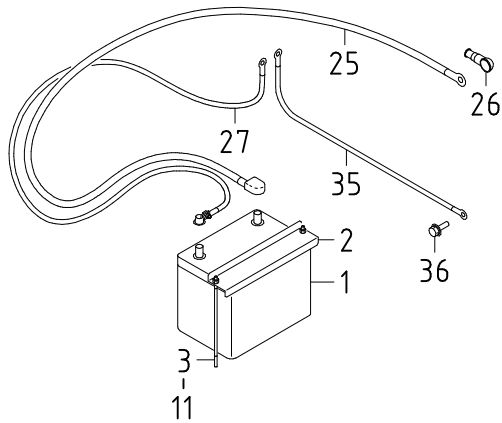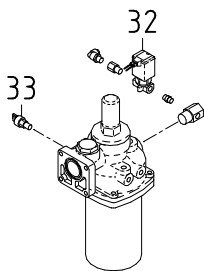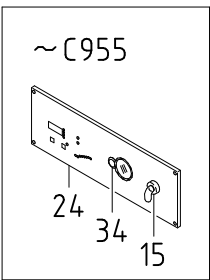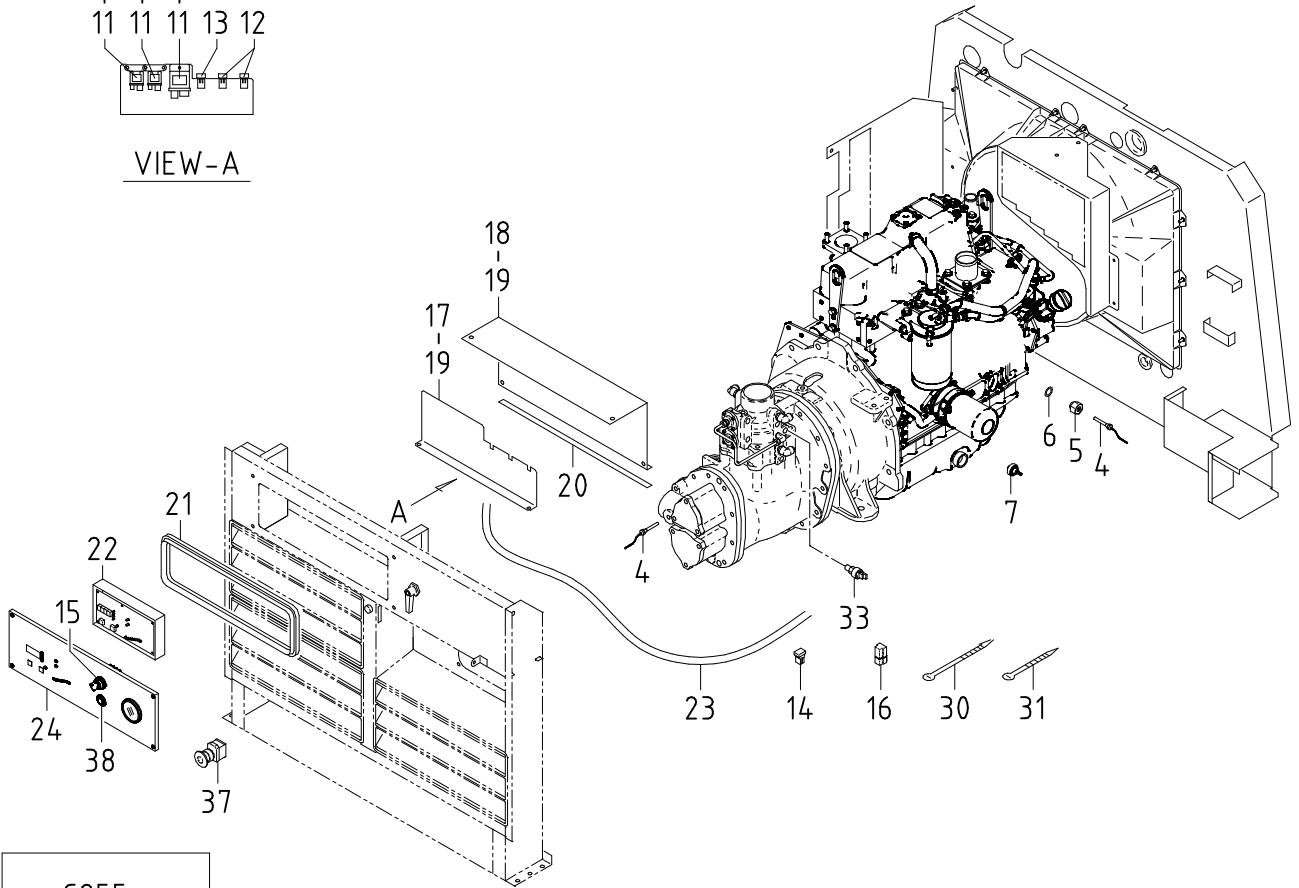     

44 - 00 ELECTRIC

Remarks
 A: EXP.
 B: US MODEL
 C: AUSTRALIA MODEL
 D: CHINA MODEL


Ref. NO. 索引编号	Part NO. 部件编号	Inter- change ability 互换性	Part Name 部件名称	Q'ty 数量	Applicable Ser. No. 适用机号 范围	Remarks 备考
44 - 00 ELECTRIC GROUP 电气构成						A B C D
1	44210 08200	Y	Battery 电瓶	1		(85D26R)
1	44210 06600	Y	Battery 电瓶	1		(80D26R)
2	44220 25400		Cover 盖	1		
3	02832 06050		Rod 杠杆	2		
4	44364 06500		Thermo sensor 排气水温传感器	2	~5278	
4 -1	44364 08200	A	Thermo sensor 排气水温传感器	2	5279~	
	06540 07020		Corrugated tube 波纹软管	1		(protector)
5	36331 15500		Nipple 管接头	1		
6	03407 20016		Gasket 垫片	1		
7	44328 21800		Pressure switch 油压开关	1		
(YANMAR 114250-39450)						
8	44346 16400		Relay (safety) 继电器(安全)	1		
(YANMAR 119802-77200)						
9	44327 05000		Relay (heater) 继电器(加热器)	1		
(YANMAR 119650-77910)						
10	44327 05000		Relay (solenoid) 继电器(螺线管)	1		
(YANMAR 119650-77910)						
11	02915 00006		Hexagon flange nuts 法兰螺母	7		
12	44470 02100		Fuse box 保险盒	2		
	46934 05000		Fuse 保险	2		(5A)
13	44470 02600		Fuse box 保险盒	1		
	46934 05100		Fuse 保险	1		(30A)
14	44470 02900		Fuse box 保险盒	1		(50A)
15	44322 07300		Starter switch 启动开关	1	~C955	
	52739 00600		Key 键	1	~C955	
15 -1	46167 07100	B	Select switch 选择开关	1	C956~	
	52739 04600	B	Key 键	1	C956~	
	45214 03300	D	Washer 垫圈	1	C956~	
16	46921 02300		Silicon rectifier 整流器	1		
17	44250 38810		Bracket 支架(板)	1		
18	44260 41100		Cover 盖	1		
19	02201 06016		Flange bolt 法兰螺栓	8		
20	03407 66842		Seal rubber 密封橡胶	1		
21	03407 64742		Seal rubber 密封橡胶	1		
22	46879 54300		Controller complete 控制器(1组)	1	~0407	⊙ ⊙ ⊙
22 -1	46870 51904	A	Controller 控制器	1	~C955	⊙ ⊙ ⊙
22 -2	46870 00511	B	Controller 控制器	1	C956~	⊙ ⊙ ⊙
22	46879 55900		Controller complete 控制器(1组)	1	~0407	⊙
22 -1	46870 54002	A	Controller 控制器	1	0408~	⊙
23	44490 85430		Wiring harness 线束	1	~5470	⊙ ⊙ ⊙
23 -1	44490 42540	B	Wiring harness 线束	1	5471~	⊙ ⊙ ⊙
w/o PRE-FILTER						
23	44490 85430		Wiring harness 线束	1	~5442	⊙ ⊙ ⊙
23 -1	44490 42540	B	Wiring harness 线束	1	~B437	⊙ ⊙ ⊙
23 -2	44490 44750	B	Wiring harness 线束	1	~C955	⊙ ⊙ ⊙
23 -3	44490 80050	B	Wiring harness 线束	1	-	⊙ ⊙ ⊙
23 -4	44490 84450	B	Wiring harness 线束	1	~D148	⊙ ⊙ ⊙
	44490 84250	D	Wiring harness 线束	1	C956~	⊙ ⊙ ⊙
	44490 84250	C	Wiring harness 线束	1	D149~	⊙ ⊙ ⊙
23 -5	44490 85150	B	Wiring harness 线束	1	D149~	⊙ ⊙ ⊙
w. PRE-FILTER						
23	44490 87130		Wiring harness 线束	1		⊙

44 - 00 ELECTRIC

Remarks
 A: EXP.
 B: US MODEL
 C: AUSTRALIA MODEL
 D: CHINA MODEL

Ref. NO. 索引编号	Part NO. 部件编号	Inter- change ability 互换性	Part Name 部件名称	Q' ty 数量	Applicable Ser. No. 适用机号 范围	Remarks 备考
						A B C D
24	36110 05610		Instrument panel	1	~C955	◎ ◎ ◎
24 -1	36110 40710	B	Instrument panel	1	C956~	◎ ◎ ◎
24	36110 06010		Instrument panel	1		◎
	02401 66020		Screw	4		
25	07885 25140		Cable	1		(battery~starter)
	44462 05500		Insulator	1		(battery"+")
	06540 15130		Corrugated tube	1		(protector)
26	44462 00800		Insulator	2		(starter/alternator)
27	07888 51100		Cable	1		(earth)
	02201 10020	C	Flange bolt	2	7608~	
	02248 10020	D	Bolt, w/w	2	7608~	
28	36159 02202		Sending unit	1		Incl. No. 29
	02915 00005		Hexagon flange nuts	5		
29	36153 01600		Gasket	1		
30	03425 00003		Vinyl clip	1		
31	03425 00001		Vinyl clip	10		
32	46811 24100		Solenoid valve	1		- ◎ - -
33	44328 20600		Pressure switch	2		- ◎ - -
34	46242 21500		Push button switch	1		- ◎ - -
35	05068 23040	D	Cable	1	7608~	(earth)
	02248 10020	D	Bolt, w/w	1	7608~	
36	02248 08020	D	Bolt, w/w	1	7608~	(earth)
37	44336 04000	D	Botton switch (Incl. Cap)	1	B438~	(emergency stop)
	44382 01301	D	Cap	1	B438~	
38	46242 23400	D	Push button switch	1	C956~	

 US/AUSTRALIA MODEL

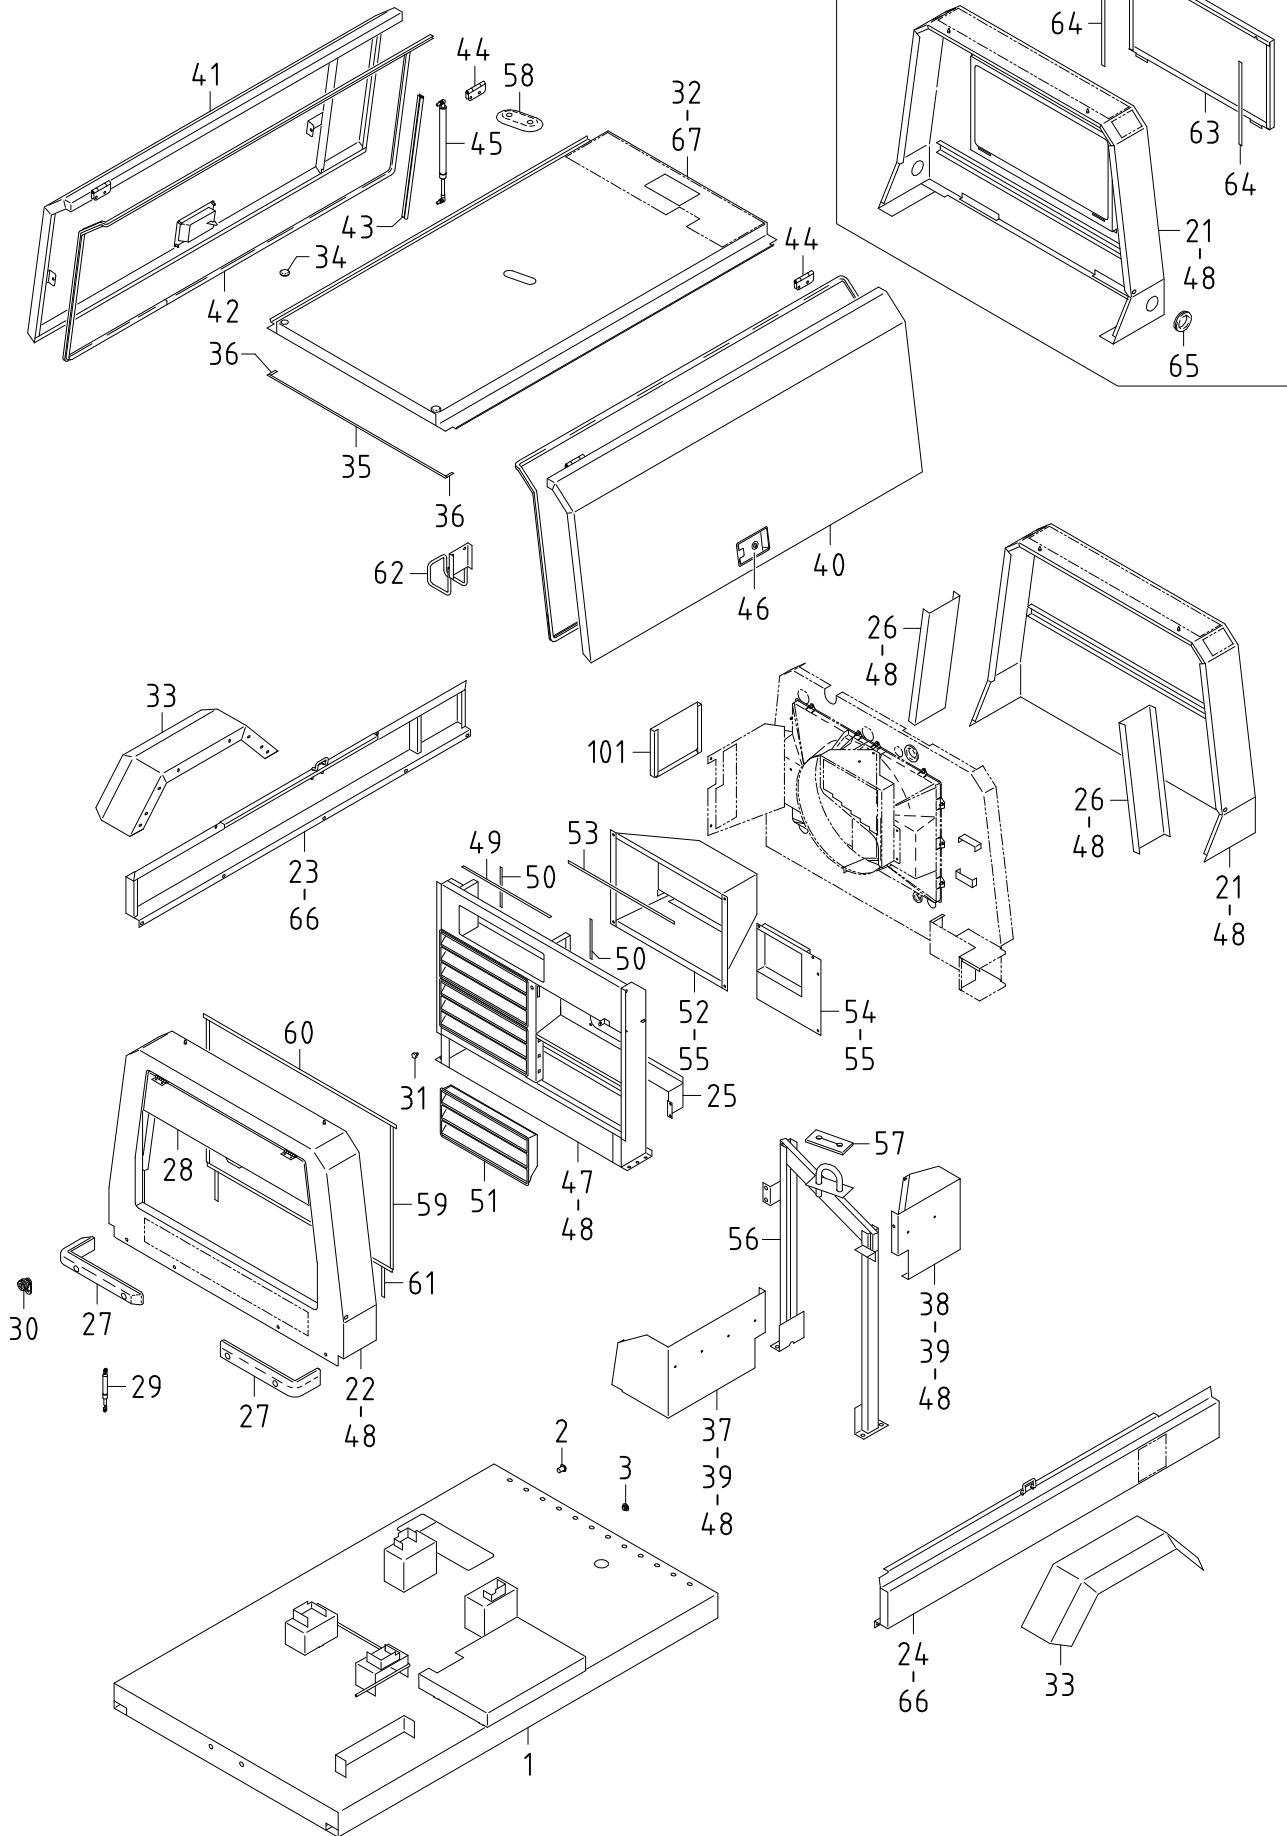

51 - 00 FRAME & BONNET

Remarks
 A: EXP.
 B: US MODEL
 C: AUSTRALIA MODEL
 D: CHINA MODEL

Ref. NO. 索引编号	Part NO. 部件编号	Inter-changeability 互换性	Part Name 部件名称	Q'ty 数量	Applicable Ser. No. 适用机号范围	Remarks 备考
51 - 00 FRAME GROUP 底盘构成						A B C D
1	51100 34942		Frame 底盘	1		⊙ ⊙ ⊙
1	51100 34942		Frame 底盘	1	~8096	⊙
1 -1	51100 86340	B	Frame 底盘	1	8097~	⊙
2	37181 07400		Clip 锁扣	4		
3	03403 10017		Grommet 环形圈	2		
52 - 00 BONNET GROUP 机壳构成						
21	52100 93220		Cover 盖	1		⊙
21	52100 97020		Cover 盖	1		⊙
21	52100 98520		Cover 盖	1	~0483	⊙
21 -1	52100 97020	B	Cover 盖	1	0484~	⊙
21	52100 93220		Cover 盖	1	~8096	⊙
21 -1	52100 68830	B	Cover 盖	1	8097~	⊙
22	52100 96921		Cover 盖	1		⊙ ⊙ ⊙
22	52100 93521		Cover 盖	1		⊙
23	52400 18820		Side cover 侧板	1		
24	52400 18721		Side cover 侧板	1		
25	52350 74520	D	Cover 盖	1	0103~	- ⊙ - -
	02201 06016	D	Flange bolt 法兰螺栓	4	0103~	- ⊙ - -
26	52550 19910		Side plate 侧板	2		
27	52728 31211		Cushion rubber 减振橡胶	2		
	02246 08050		Bolt, w/w 组合螺栓	6		
	52162 00200		Collar 衬	6		
28	52450 28330		Door 门	1		
	02345 65010		Screw 螺钉	4		
29	GE360 01300		Dumper 支撑杆	1	~1333	
29 -1	GE360 03200	A	Dumper 支撑杆	1	1334~	
	03322 06017		Pin 销	2		
	03116 12006		Plain washer 平垫圈	2		
	03310 16012	C	Split pin 开尾销	2	0242~	
	56166 00900	D	Pin 销	2	0242~	
30	52723 00900		Lock 锁	1		
31	GE240 01100		Rubber cushion 密封橡胶	1	~0552	
31 -1	52728 35310	A	Cushion rubber 减振橡胶	1	0553~	
32	52300 29021		Top cover 顶盖, 顶板	1		
33	53220 69901		Fender 挡泥板	2		⊙ ⊙ ⊙
33	53220 69801		Fender 挡泥板	2		⊙ ⊙
	02246 06016		Bolt, w/w 组合螺栓	12		
34	52746 02101		Cap 盖	2		
35	03407 65009		Seal rubber 密封橡胶	1		
36	03407 65029		Seal rubber 密封橡胶	2		
37	52750 30301		Bracket 支架(板)	1	~5470	w/o PRE-FILTER
37 -1	52750 31400	B	Bracket 支架(板)	1	5471~	w/o PRE-FILTER
37	52750 30301		Bracket 支架(板)	1	~5442	w. PRE-FILTER
37 -1	52750 31400	B	Bracket 支架(板)	1	5443~	w. PRE-FILTER
38	52750 30401		Bracket 支架(板)	1		

51 - 00 FRAME & BONNET


 Remarks
 A: EXP.
 B: US MODEL
 C: AUSTRALIA MODEL
 D: CHINA MODEL

Ref. NO. 索引编号	Part NO. 部件编号	Inter- change ability 互换性	Part Name 部件名称	Q'ty 数量	Applicable Ser. No. 适用机号 范围	Remarks 备考
						A B C D
39	02401 66016		Screw 螺钉	2		
	02915 00006		Hexagon flange nuts 法兰螺母	2		
40	52450 26031		Door 门	1		
41	52450 26131		Door 门	1		
42	03407 64730		Seal rubber 密封橡胶	2		
43	03407 67234		Seal rubber 密封橡胶	2		
44	52480 14800		Hinge 铰链	4		
	02136 08016		Bolt 螺栓	16		
45	GE360 03000		Dumper 支撑杆	4	~0921	
45 -1	GE360 03101	A	Dumper 支撑杆	4	0922~	
	02915 00008		Hexagon flange nuts 法兰螺母	8		
	45214 02300		Washer 垫圈	4		
46	52710 03601		Latch ass'y 碰锁	2		key type
	52739 03400		Key 键	1		(No. 0200)
	02915 00006		Hexagon flange nuts 法兰螺母	8		
47	52370 79802		Duct 导板	1	~B437	◎ ◎ ◎
47 -1	52370 50910	B	Duct 导板	1	B438~	◎ ◎ ◎
47	52370 83401		Duct 导板	1		◎
48	02201 08020		Flange bolt 法兰螺栓	26		
49	03407 68043		Seal rubber 密封橡胶	1		
50	03407 68031		Seal rubber 密封橡胶	2		
51	52370 81800		Duct 导板	3		
52	52350 72220		Cover 盖	1	~B437	
52 -1	52350 50030	B	Cover 盖	1	B438~	
53	03407 68057		Seal rubber 密封橡胶	1	~B437	
53 -1	03407 68054	B	Seal rubber 密封橡胶	1	B438~	
54	52350 72320		Cover 盖	1		
55	02201 06016		Flange bolt 法兰螺栓	7		
	02915 00006		Hexagon flange nuts 法兰螺母	3		
56	52620 48200		Lifting bail 起吊具	1	~0892	
56 -1	52620 48900	B	Lifting bail 起吊具	1	0893~	
	02135 12030		Bolt 螺栓	4		
	03115 02012		Spring washer 弹簧垫圈	4		
	03116 12012		Plain washer 平垫圈	4		
57	52728 16110		Cushion rubber 减振橡胶	1	~0193	
57 -1	52728 34810	A	Cushion rubber 减振橡胶	1	0194~	
58	52746 01800		Cap 盖	1		
59	03407 66942		Seal rubber 密封橡胶	2		
60	03407 66927		Seal rubber 密封橡胶	2		
61	03407 66956		Seal rubber 密封橡胶	2		
62	02201 08020		Flange bolt 法兰螺栓	2		◎ ◎
	02915 00008		Hexagon flange nuts 法兰螺母	2		◎ ◎
62	52660 05100		Hook 吊钩	1		◎ ◎
	02201 08020		Flange bolt 法兰螺栓	2		◎ ◎
63	52350 30120		Cover 盖	1		◎
	02136 06035		Bolt 螺栓	2		◎
	03115 06006		Spring washer 弹簧垫圈	2		◎
	03116 15006		Plain washer 平垫圈	2		◎
63	52350 30120	D	Cover 盖	1	0484~	◎
	02136 06035	D	Bolt 螺栓	2	0484~	◎
	03115 06006	D	Spring washer 弹簧垫圈	2	0484~	◎
	03116 15006	D	Plain washer 平垫圈	2	0484~	◎

51 - 00 FRAME & BONNET

Remarks
 A: EXP.
 B: US MODEL
 C: AUSTRALIA MODEL
 D: CHINA MODEL

Ref. NO. 索引编号	Part NO. 部件编号	Inter- change ability 互换性	Part Name 部件名称		Q' ty 数量	Applicable Ser. No. 适用机号 范围	Remarks 备考			
							A	B	C	D
64	03407 66839		Seal rubber	密封橡胶	2			◎		
64	03407 66839	D	Seal rubber	密封橡胶	2	0484~			◎	
65	03403 00592	D	Grommet	环形圈	2	0484~	-	-	◎	-
66	02246 08025		Bolt, w/w	组合螺栓	10					
	02915 00008		Hexagon flange nuts	法兰螺母	6					
67	02246 08025		Bolt, w/w	组合螺栓	6					
	39 - 00		ACCESSORY GROUP	附件构成						
101	39200 09600		Tool box	工具箱	1	~0338				
101 -1	39200 09901	A	Tool box	工具箱	1	0339~				
	02709 00410		Tapping screw	自攻螺丝	4					

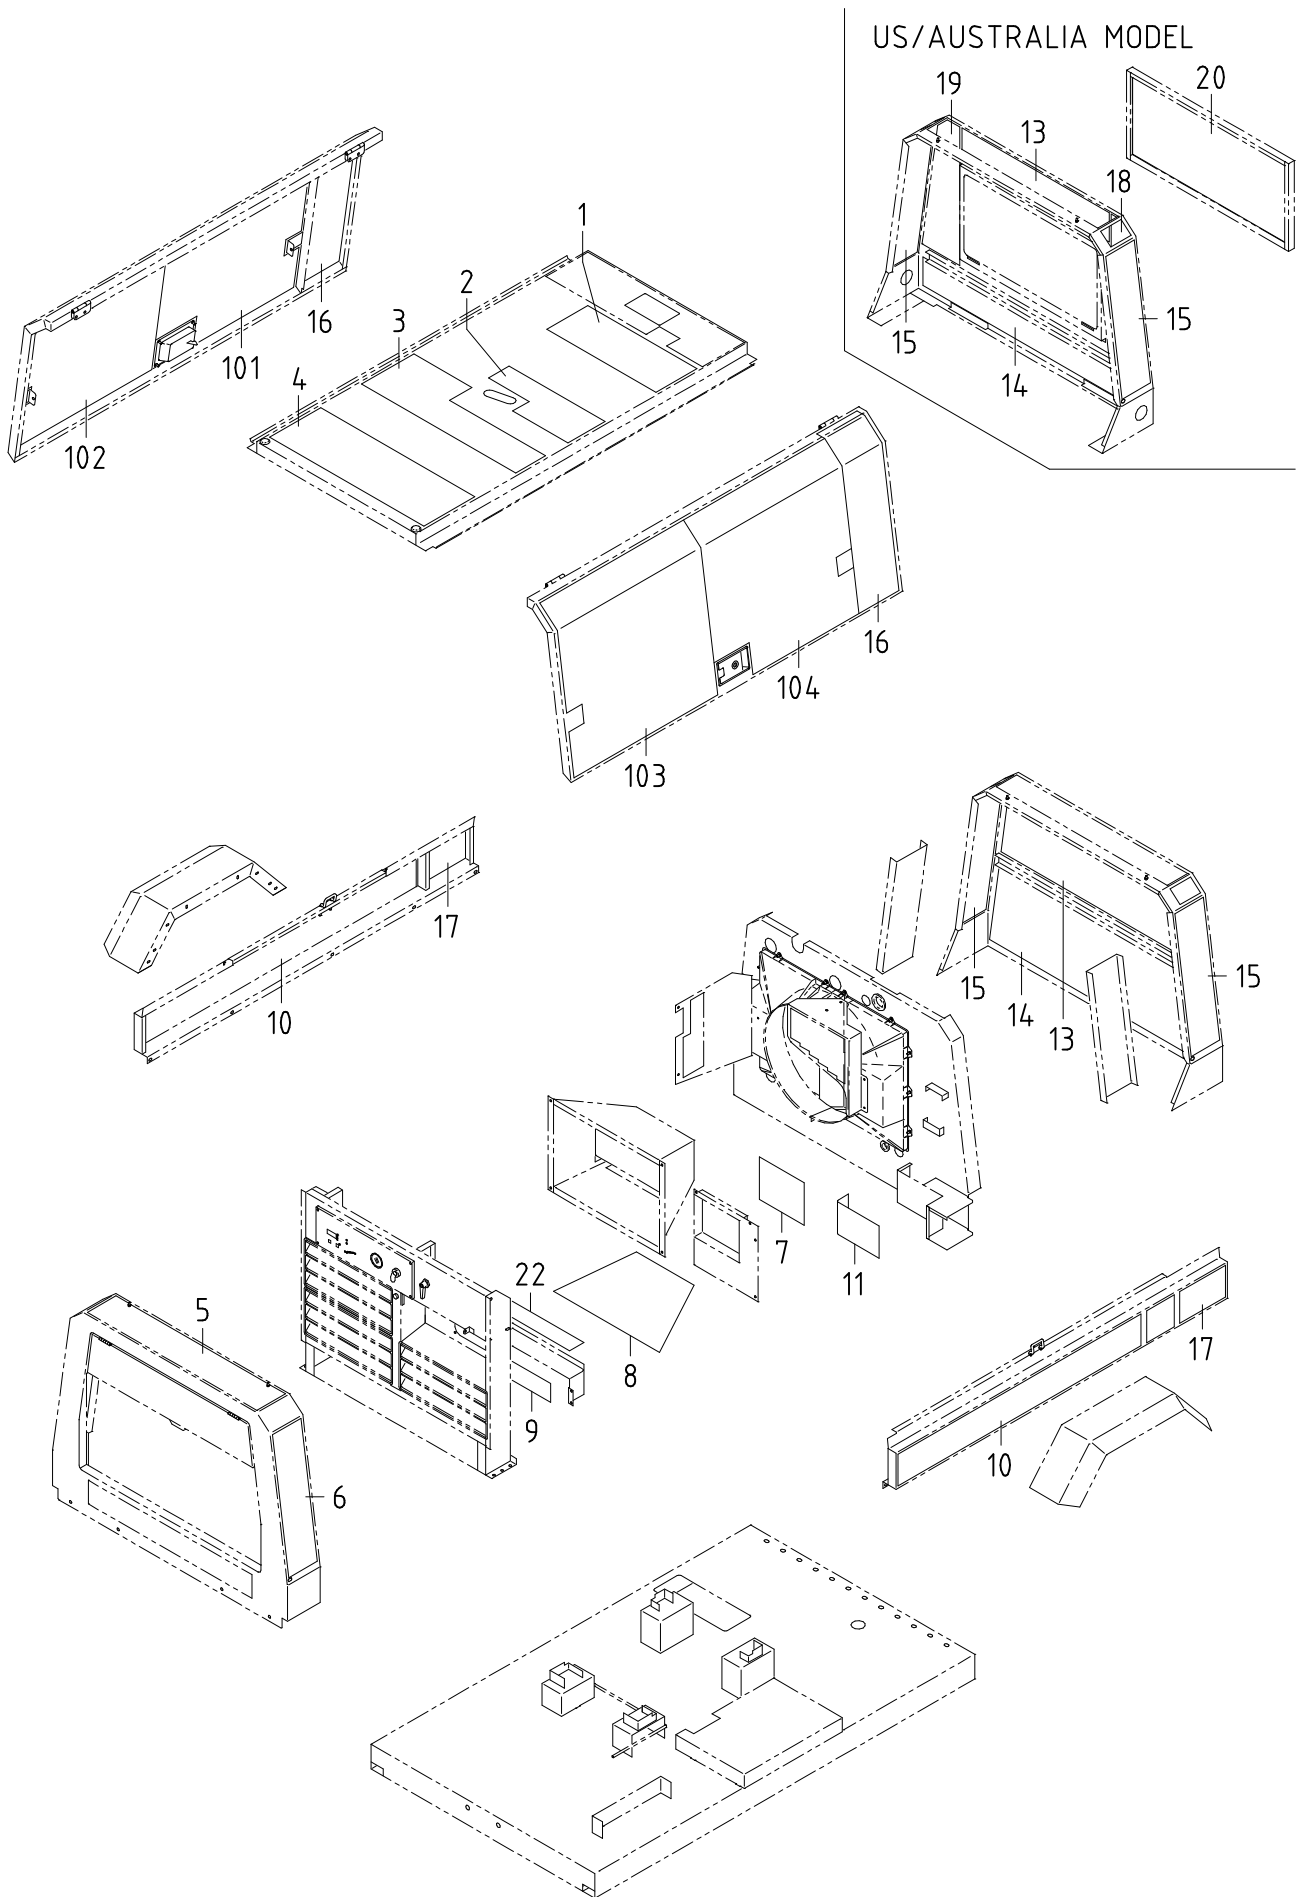 

52 - 00 LINING


Remarks
 A: EXP.
 B: US MODEL
 C: AUSTRALIA MODEL
 D: CHINA MODEL

Ref. NO. 索引编号	Part NO. 部件编号	Inter- change ability 互换性	Part Name 部件名称	Q' ty 数量	Applicable Ser. No. 适用机号 范围	Remarks 备考
	52900 02421		URETHANE FOAM KIT 合成橡胶套件	1	~B437	A ◎ B C D ◎
	52900 66420	B	URETHANE FOAM KIT 合成橡胶套件 (Const. No. 1~17, 20 & 101~104)	1	B438~	◎ ◎
	52900 02722		URETHANE FOAM KIT 合成橡胶套件 (Const. No. 1~20, 22 & 101~104)	1		◎
	52900 02421		URETHANE FOAM KIT 合成橡胶套件 (Const. No. 1~17, 20 & 101~104)	1	~0483	◎
	52900 05020	B	URETHANE FOAM KIT 合成橡胶套件	1	~B437	◎
	52900 81320	B	URETHANE FOAM KIT 合成橡胶套件 (Const. No. 1~20 & 101~104)	1	B438~	◎
1	52959 14030		Lining 防音材	1		
2	52931 85920		Lining 防音材	1	~0102	
2 -1	52959 40840	A	Lining 防音材	1	0103~	
3	52931 86020		Lining 防音材	1	~0102	
3 -1	52959 14750	A	Lining 防音材	1	0103~	
4	52959 25930		Lining 防音材	1		
5	52959 15240	C	Lining 防音材	1	0103~	◎ ◎ ◎
5	52959 15240		Lining 防音材	1		◎
6	52959 88930	C	Lining 防音材	2	0103~	◎ ◎ ◎
6	52959 88930		Lining 防音材	2		◎
7	52959 21840		Lining 防音材	1		
8	52931 86120		Lining 防音材	1	~B437	
8 -1	52931 37530	B	Lining 防音材	1	B438~	
9	52959 69350		Lining 防音材	1		
10	52959 41340	C	Lining 防音材	2	0103~	◎ ◎ ◎
10	52959 41340		Lining 防音材	2	~0752	◎
10 -1	52959 41340	Q	Lining 防音材	1	0753~	◎
11	52959 96530	C	Lining 防音材	1	0103~	
12	* * *					
13	52939 08340		Lining 防音材	1		◎ ◎
13	52919 40020		Lining 防音材	1		◎
13	52939 08340		Lining 防音材	1	~0483	◎
13 -1	52919 40020	B	Lining 防音材	1	0484~	◎
14	52939 08440		Lining 防音材	1	~0102	◎ ◎
14 -1	52919 62410	A	Lining 防音材	1	0103~	◎ ◎
14	52919 18500		Lining 防音材	1		◎
14	52939 08440		Lining 防音材	1	~0102	◎
14 -1	52919 62410	A	Lining 防音材	1	~0483	◎
14 -2	52919 18500	B	Lining 防音材	1	0484~	◎
15	52919 09100		Lining 防音材	2		
16	52919 77420		Lining 防音材	2		
17	52919 17310		Lining 防音材	2		
18	52939 08540		Lining 防音材	1		◎
18	52939 08540	D	Lining 防音材	1	0484~	◎
19	52939 08640		Lining 防音材	1		◎
19	52939 08640	D	Lining 防音材	1	0484~	◎
20	52919 99620		Lining 防音材	1		◎
20	52919 99620	D	Lining 防音材	1	0484~	◎
21	* * *					
22	52959 70120	D	Lining 防音材	1	0103~	- ◎ - -

52 - 00 LINING

Remarks
 A: EXP.
 B: US MODEL
 C: AUSTRALIA MODEL
 D: CHINA MODEL

Ref. NO.	Part NO.	Inter-changeability	Part Name	Q' ty	Applicable Ser. No.	Remarks
索引编号	部件编号	互换性	部件名称	数量	适用机号范围	备考
A B C D						
101	52978 16100		Lining	1		
102	52978 16200		Lining	1		
103	52978 16300		Lining	1		
104	52978 16400		Lining	1		

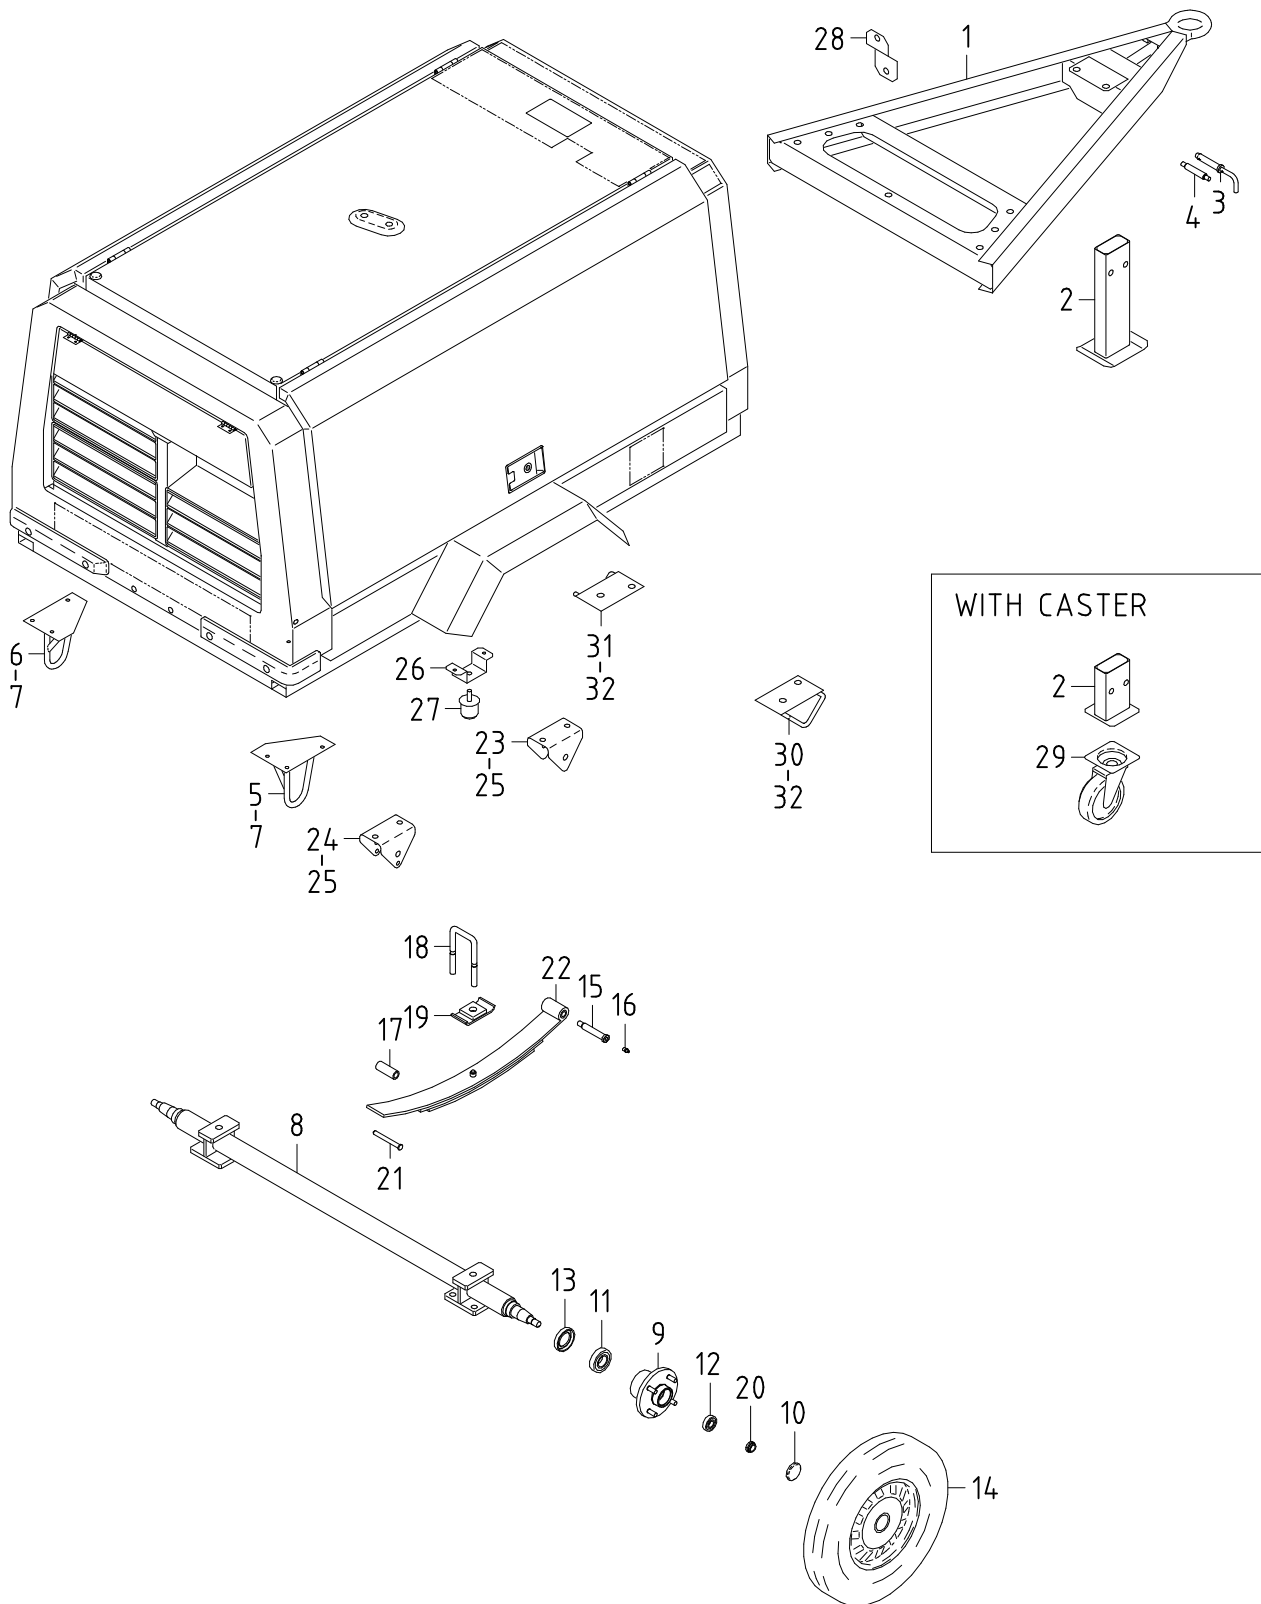 

54 - 00 RUNNING & STEERING

Remarks
 A: EXP.
 B: US MODEL
 C: AUSTRALIA MODEL
 D: CHINA MODEL

Ref. NO. 索引编号	Part NO. 部件编号	Inter- change ability 互换性	Part Name 部件名称	Q'ty 数量	Applicable Ser. No. 适用机号 范围	Remarks 备考
	54 - 00		RUNNING GROUP			A B C D
			走行构成			
1	51300 22500		Draw bar	1		◎ ◎
	02135 16040		Bolt	7		◎ (8) (8) ◎
	03115 02016		Spring washer	7		◎ (8) (8) ◎
	03116 12016		Plain washer	7		◎ (8) (8) ◎
2	51410 24700		Stand (w. caster)	1		◎
2	51410 24600		Stand (w/o caster)	1		◎ ◎
3	51520 01700		Pin	1		◎ ◎
	51420 01001		Chain	1		◎ ◎
	51420 01101		Chain	1		◎ ◎
4	51434 03000		Bolt, stand	1		◎ ◎
	02915 00012		Hexagon flange nuts	2		◎ ◎
5	51550 04400		Stand, rear	1		◎ (1) (1) ◎
6	51550 04500		Stand, rear	1		◎ (1) (1) ◎
7	02201 10030		Flange bolt	6		◎ (6) (6) ◎
	02915 00010		Hexagon flange nuts	6		◎ (6) (6) ◎
8	54200 39400		Axle	1		◎ ◎
9	54341 04001		Hub	2		◎ ◎
	54343 01900		Bolt	8		◎ ◎
10	54342 00600		Cap	2		◎ ◎
11	03410 30207		Bearing	2		◎ ◎
12	03410 30204		Bearing	2		◎ ◎
13	54345 00100		Oil seal	2		◎ ◎
14	54420 06600		Tire ass'y	2	~5925	◎ ◎
14 -1	54420 07201	A	Tire ass'y	2	5926~	◎ ◎
	54344 01300		Nut	8		◎ ◎
15	54624 02400		Pin	4		◎ ◎
	02914 50014		Locking nut	4		◎ ◎
	03116 12014		Plain washer	4		◎ ◎
16	03408 10010		Grease nipple	4		◎ ◎
17	54622 00500		Bushing	2		◎ ◎
18	54627 05600		U-bolt	4		◎ ◎
	02914 50016		Locking nut	8		◎ ◎
19	54628 04400		Pad	2	~0241	◎ ◎
19 -1	54628 04700	A	Pad	2	0242~	◎ ◎
20	54337 00500		Nut	2		◎ ◎
	03116 12018		Plain washer	2		◎ ◎
21	03322 12102		Pin	2		◎ ◎
	03116 12012		Plain washer	2		◎ ◎
	03310 30022		Split pin	2		◎ ◎
22	54500 03700		Leaf spring ass'y	2		◎ ◎
23	51244 01300		Bracket, spring	2		◎ ◎
24	51244 01400		Bracket, spring	2		◎ ◎
25	02135 14030		Bolt	8		◎ (8) (8) ◎
	03115 42014		Spring washer	8		◎ (8) (8) ◎
26	54611 03200		Plate	2		◎ ◎
	02201 08020		Flange bolt	4		◎ ◎
27	31130 26700		Vibration isolator ass'y	2		◎ ◎
	02915 00012		Hexagon flange nuts	2		◎ ◎

54 - 00 RUNNING & STEERING

 Remarks
 A: EXP.
 B: US MODEL
 C: AUSTRALIA MODEL
 D: CHINA MODEL

Ref. NO. 索引编号	Part NO. 部件编号	Inter- change ability 互换性	Part Name 部件名称	Q' ty 数量	Applicable Ser. No. 适用机号 范围	Remarks 备考
						A B C D
28	51303 15000		Plate	2		◎ ◎
	02135 16040		Bolt	4		◎ ◎
	03115 02016		Spring washer	4		◎ ◎
	03116 12016		Plain washer	4		◎ ◎
29	51460 02500		Gaster	1		◎
	02201 10020		Flange bolt	4		◎
	02915 00010		Hexagon flange nuts	4		◎
30	52660 06000	D	Hook	1	0312~	(1) (1)
31	52660 06100	D	Hook	1	0312~	(1) (1)
32	02135 16040	D	Bolt	4	0312~	(4) (4)
	03115 02016	D	Spring washer	4	0312~	(4) (4)
	03116 12016	D	Plain washer	4	0312~	(4) (4)

ORDER MADE PARTS

SS1 - 00 WITHOUT TIRE TYPE (HIGHWAY TYPE)

Ref. NO.	Part NO.	Inter-change ability	Part Name	Q' ty	Applicable Ser. No.	Remarks
索引编号	部件编号	互换性	部件名称	数量	适用机号范围	备考

< CHANGED PART > < 不同部件 >

§ 31 - 00 MOUNTING, INTAKE, RECEIVER, refer to page
SEPARATOR & SERVICE HEADER 31-1

161	03620 41008		Plug	堵头	1	
-----	-------------	--	------	----	---	--

§ 51 - 00 FRAME & BONNET refer to page
51-1

33	53220 69801		Fender	挡泥板	2	
	02201 06016		Flange bolt	法兰螺栓	12	

§ 54 - 00 RUNNING & STEERING refer to page
54-1

1	02135 16040		Bolt	螺栓	8	
	03115 02016		Spring washer	弹簧垫圈	8	
	03116 12016		Plain washer	平垫圈	8	
30	52660 06000		Hook	吊钩	1	
31	52660 06100		Hook	吊钩	1	
32	02135 16040		Bolt	螺栓	4	
	03115 02016		Spring washer	弹簧垫圈	4	
	03116 12016		Plain washer	平垫圈	4	


ORDER MADE PARTS

SS2 - 00 WITHOUT TIRE TYPE

Ref. NO.	Part NO.	Inter-changeability	Part Name	Q'ty	Applicable Ser. No.	Remarks
索引编号	部件编号	互换性	部件名称	数量	适用机号范围	备考

< ORDER MADE PART > < 专用部件 >

1	54610 02101		Bracket	支架(板)	2 ~7446	
1-1	54610 02101	Q	Bracket	支架(板)	1 7447~	
2	54610 01901		Bracket	支架(板)	1	
3	54610 02101		Bracket	支架(板)	1 ~7446	
3-1	54610 02200	B	Bracket	支架(板)	1 7447~	

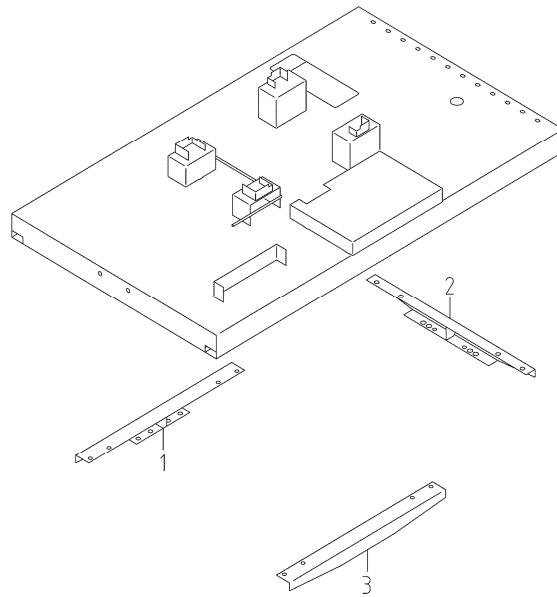 

< CHANGED PART > < 不同部件 >

§ 51 - 00 FRAME & BONNET

refer to page 51-1

3	03403 10017		Grommet	环形圈	2	
23	52400 60121		Side cover	侧板	1	
24	52400 60021		Side cover	侧板	1	
33	53220 69801		Fender	挡泥板	2	
	02201 06016		Flange bolt	法兰螺栓	12	

§ 54 - 00 RUNNING & STEERING

refer to page 54-1

1	02135 16040		Bolt	螺栓	8	
	03115 02016		Spring washer	弹簧垫圈	8	
	03116 12016		Plain washer	平垫圈	8	
30	52660 06000		Hook	吊钩	1	
31	52660 06100		Hook	吊钩	1	
32	02135 16040		Bolt	螺栓	4	
	03115 02016		Spring washer	弹簧垫圈	4	
	03116 12016		Plain washer	平垫圈	4	